


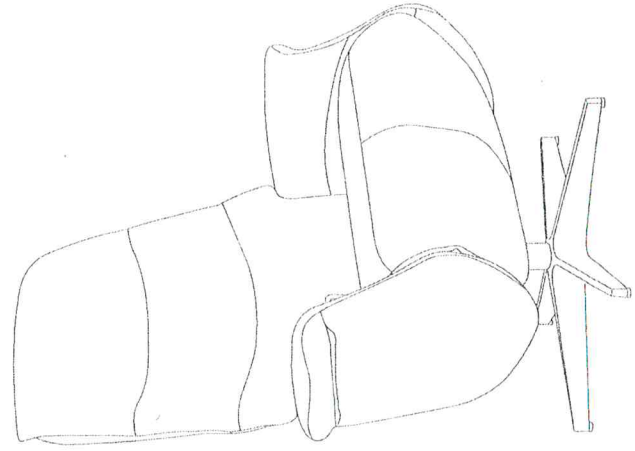



# 140048 DELTA




A		1PC
B		1PC



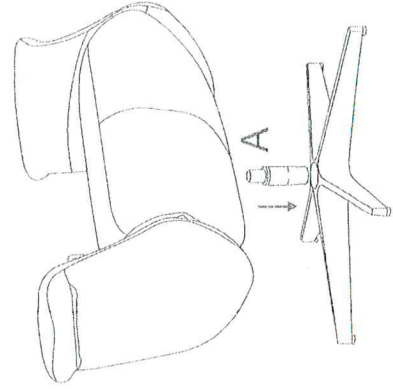1

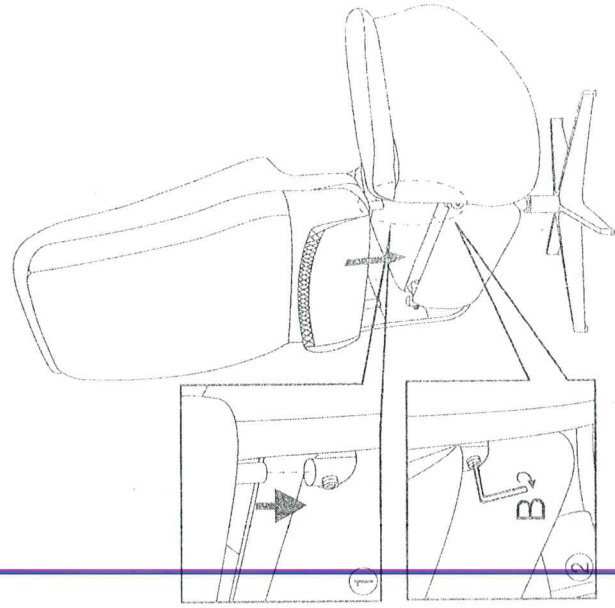


2

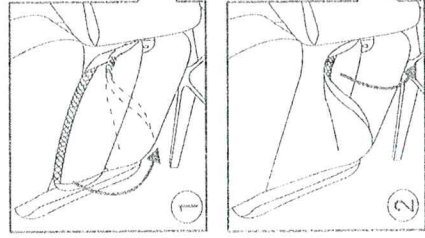


3


# USER'S GUIDE

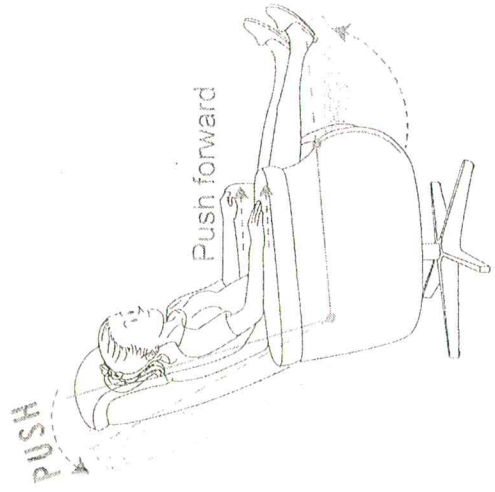


- 1** To raise the footrest, grasp both armrests and push forward while leaning back in the recliner.

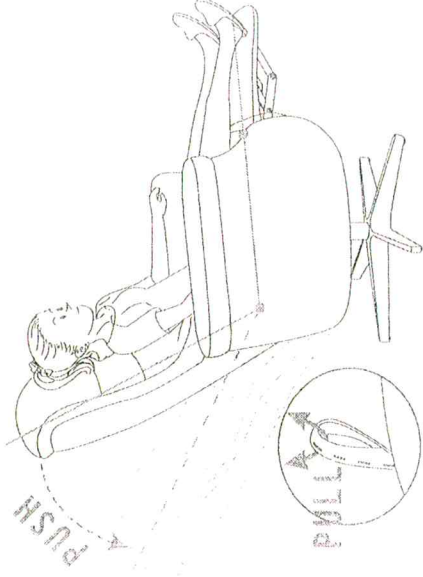

- 2** To fully recline, pull the strap loop and lean backward.

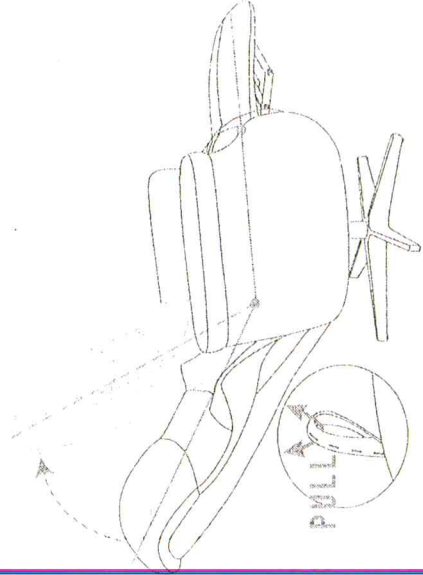


- 3** To return the recliner to an upright position, pull the strap loop and sit up.

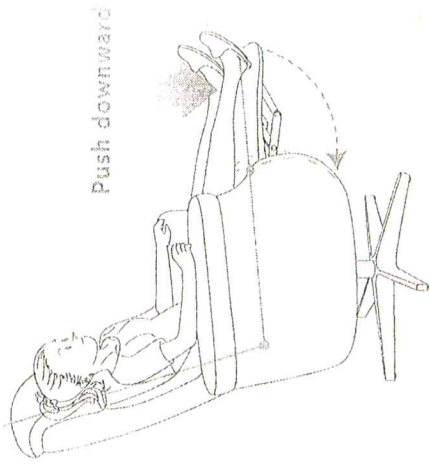


- 4** To stow the footrest, push downward with your lower legs while seated.


# CAUTION

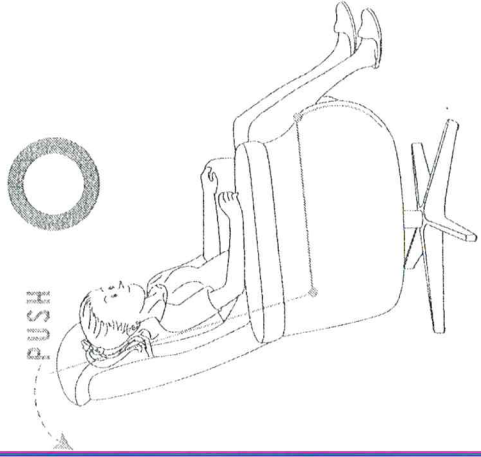


- Raise footrest from full upright position only.

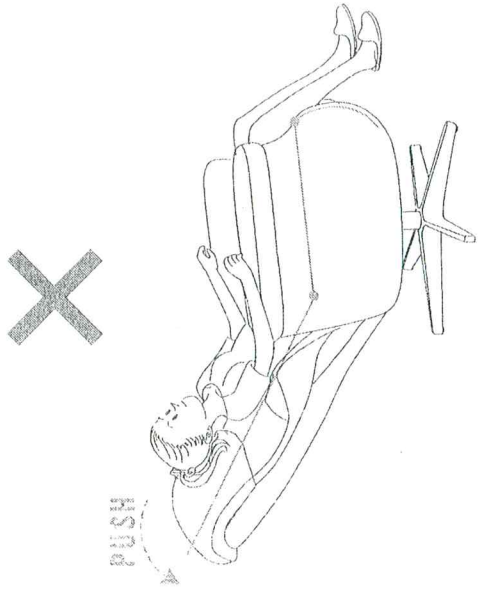

- Do not raise footrest from this position.

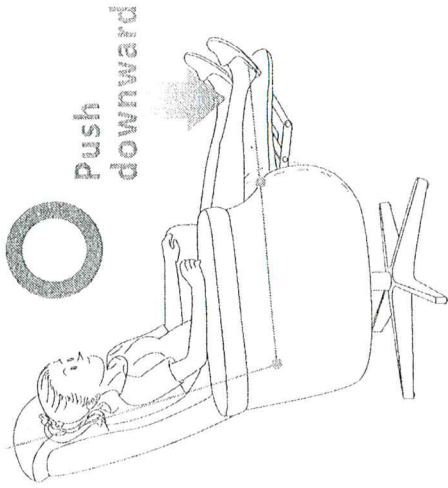


- Stow footrest with back in full upright position.

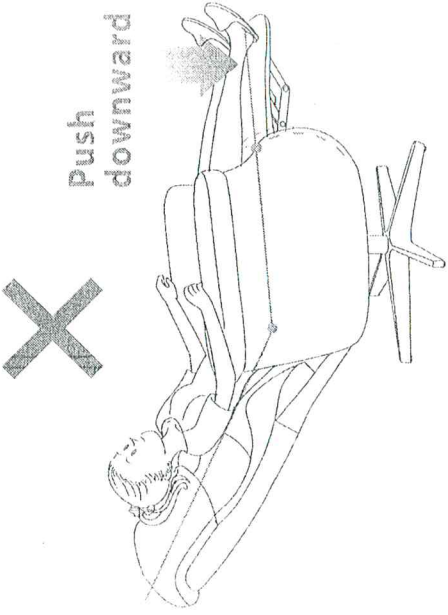


- Do not attempt to stow footrest from this position.


# HOW TO ADJUST HEADREST

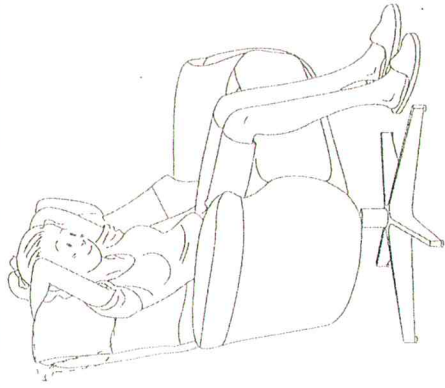

To adjust headrest: pull from back on both sides as shown.

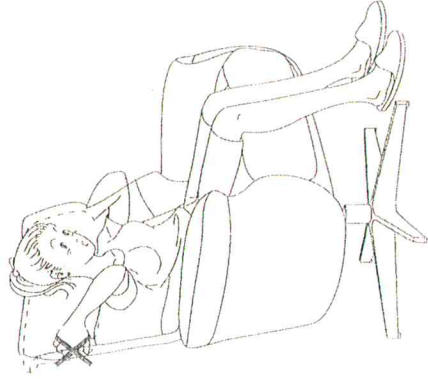

Do not pull from side edge to adjust, material may tear.

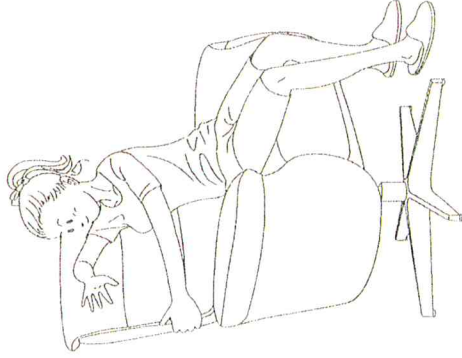

To return headrest back: push on both sides or use forearm to evenly move headrest back.

## CAUTION-

Do not push in the center of the headrest as this may cause foam cushion to collapse.

