



EB Series Greenhouse

Assembly instructions

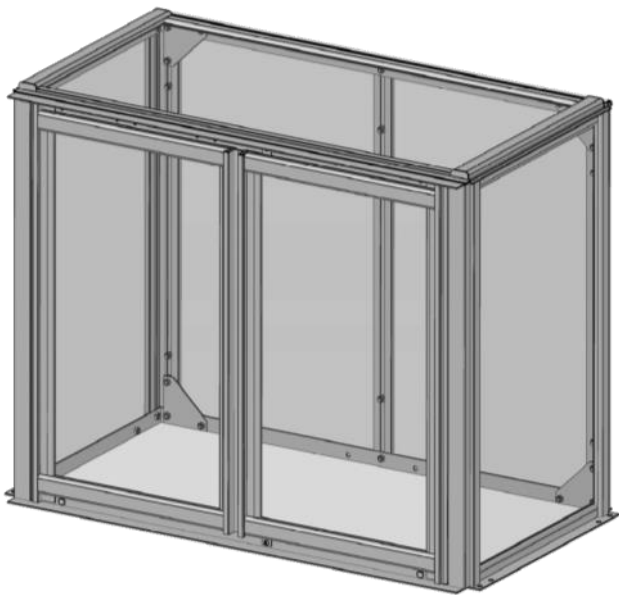

Model EB212


Size: 766x415x611MM

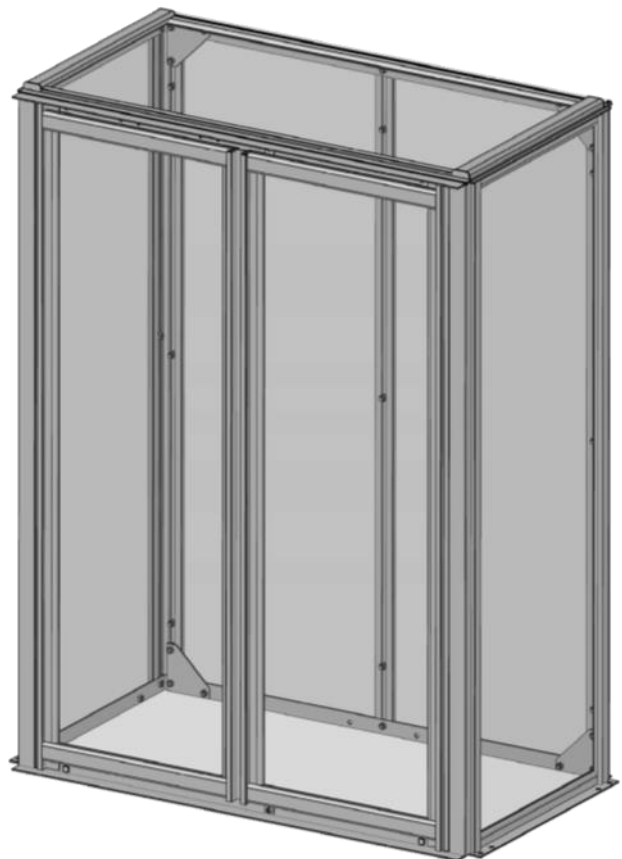


Model EB213

Size: 766x415x1011MM


Polycarbonate sheet

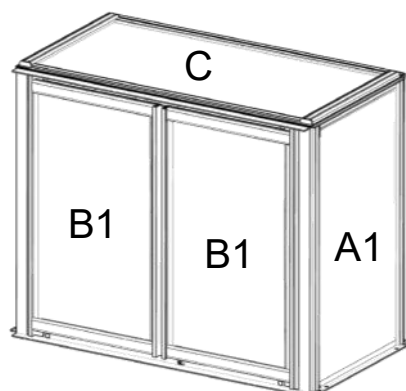


EB212

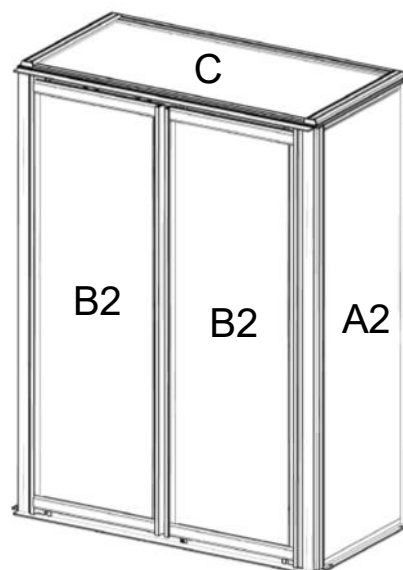

EB213

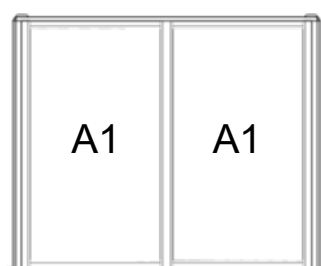

EB212

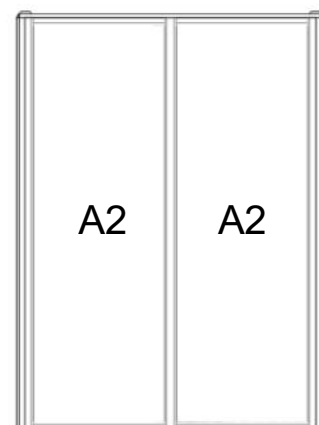

EB213






Step of PC panel assembly:

1. Remove approximately 20mm of protective film from both sides of all polycarbonate panel edges before installing to avoid scratching. Remove all protective film immediately after the constructions is completed.
2. Put double-sided adhesive tape together with masking paper on Alu. Frame first. Don't peel off masking paper from tape until polycarbonate panel in position.
3. After polycarbonate panel in position, please tear off masking paper of tape. Then double sided adhesive tape will stick Alu. Frame and polycarbonate panel firmly.
4. Finally, use Alu. capping bar to fix polycarbonate panel on Alu. Frame by bolt and nut tightly.

#	Size	EB212	EB213
A1	333 x 572	4	
A2	333 x 972		4
B1	283 x 525	2	
B2	283 x 925		2
C	333 x 691	1	1
Adhesive tape	15000 x 6 x 0.1	1 roll	2 roll

Rear


										
#	8301	8302	8304	8305	8306	8307	8300	a1	a2	a16
Size	600	1000	734	734	600	1000	-	M6x10	M6	-
EB212	2		1	1	1		4	14	14	4
EB213		2	1	1		1	4	14	14	4

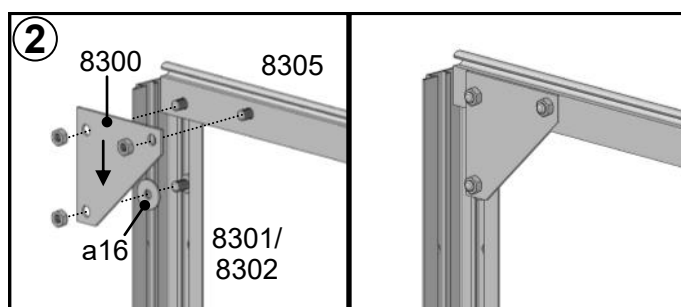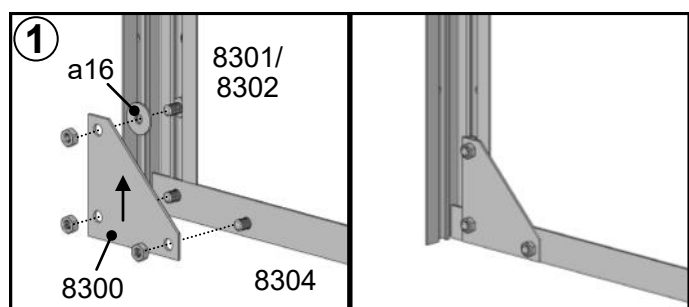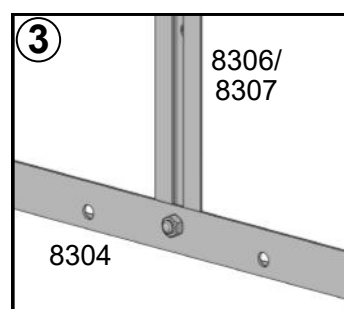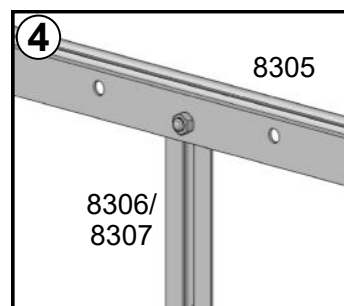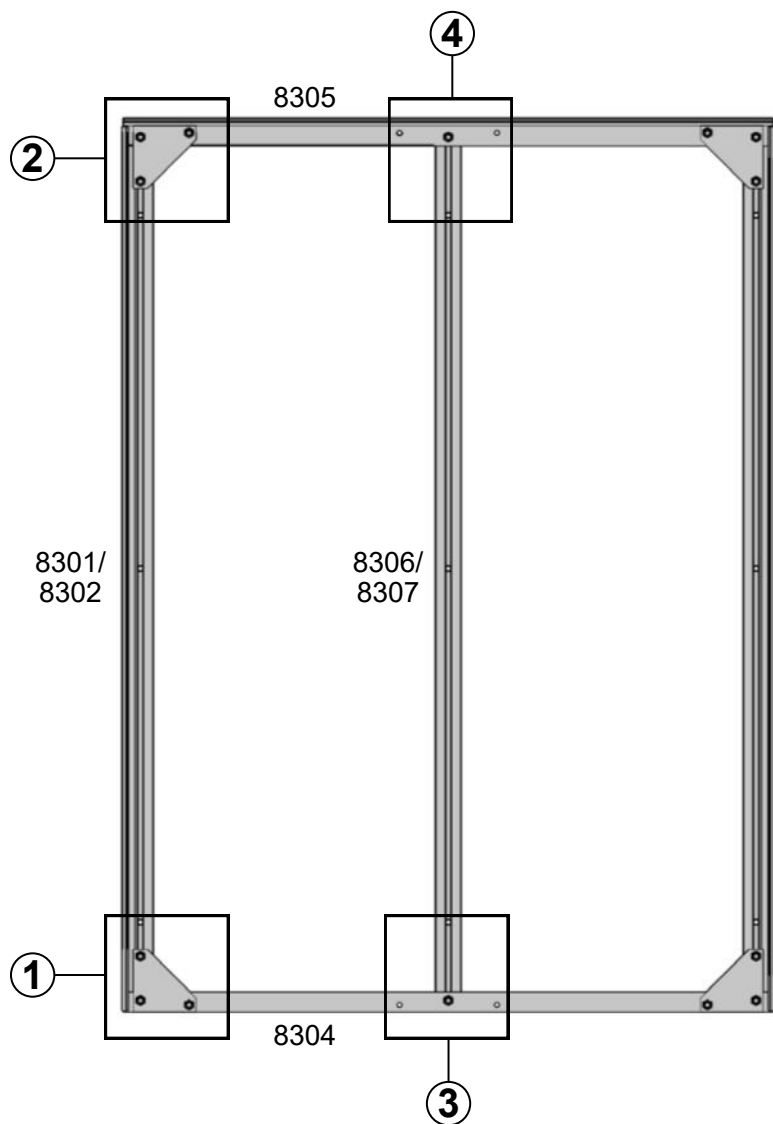







Front

								
#	8309	8310	8311	8312	8315	8316	8300	m11
Size	600	600	1000	1000	734	734	-	-
EB212	1	1			1	1	4	2
EB213			1	1	1	1	4	2

							
#	a1	a2	a7	a10	a12	a16	8082
Size	M6x10	M6	M4x8	M4	Φ4.2X9.5	-	-
EB212	12	12	6	6	2	4	2
EB213	12	12	6	6	2	4	2



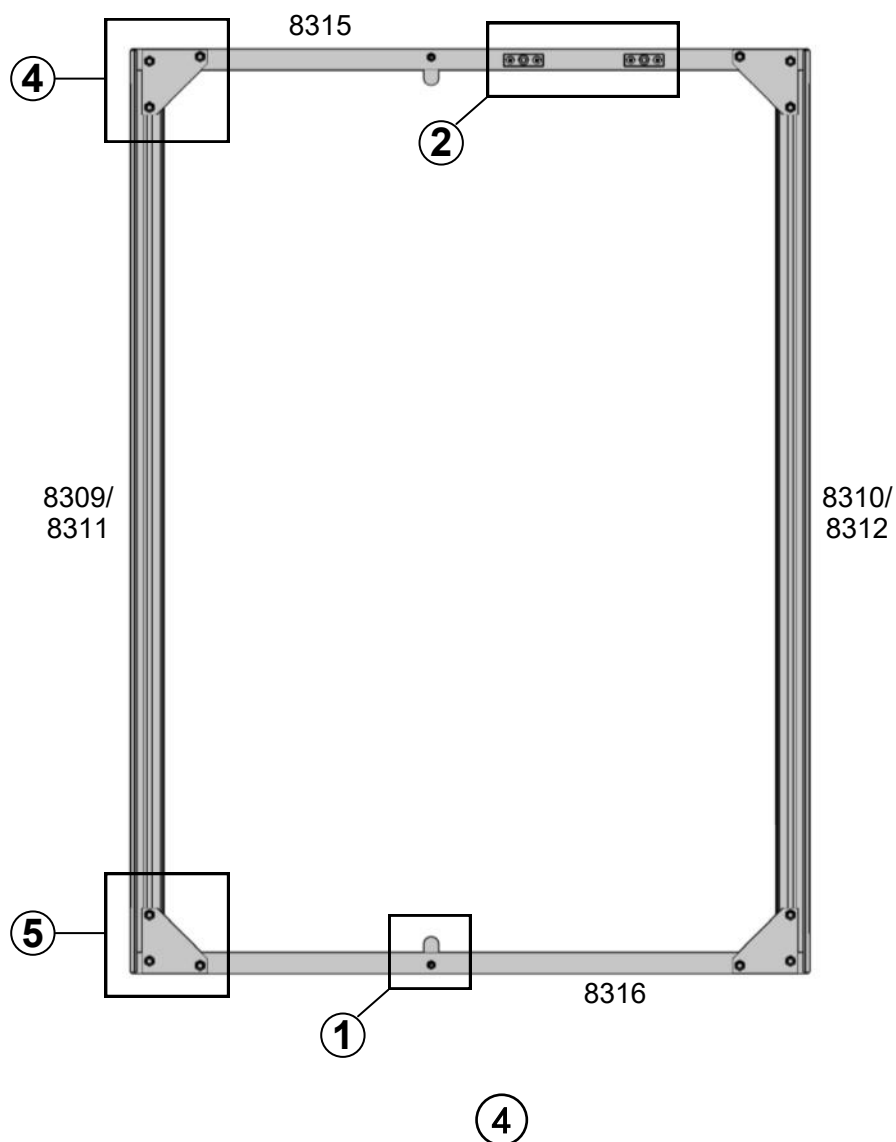


Front

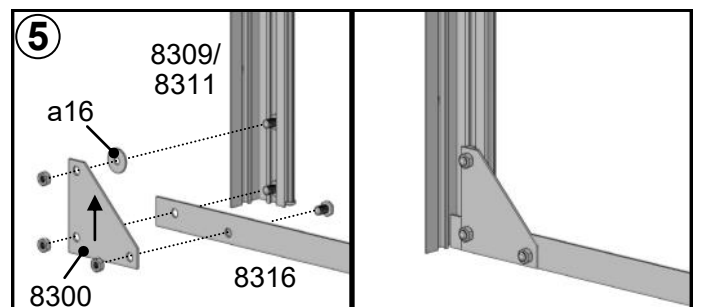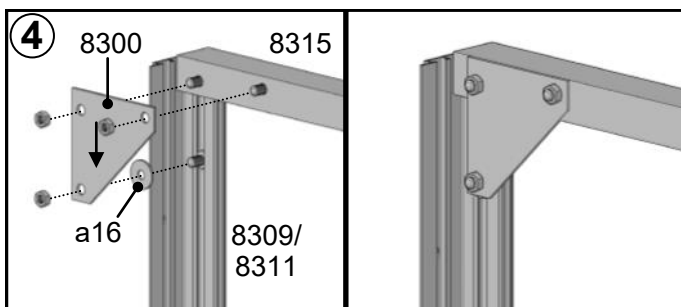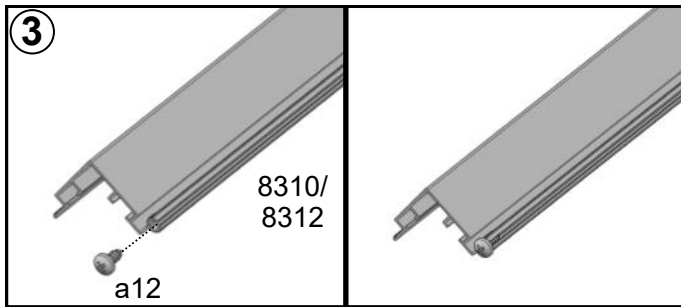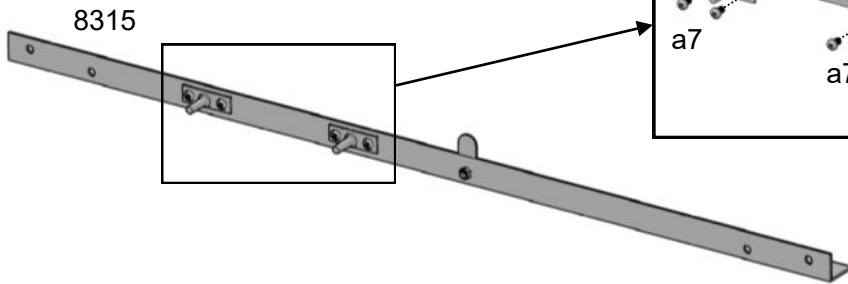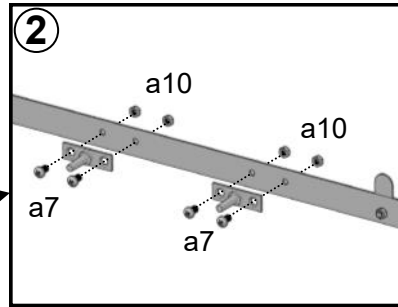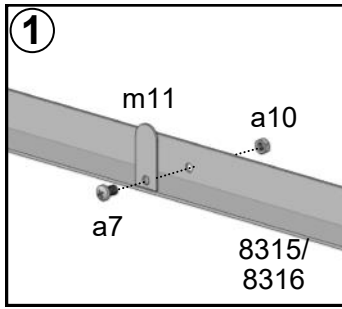






Side

				
#	8317	8318	a1	a2
Size	372	372	M6x10	M6
QTY	2	2	8	8


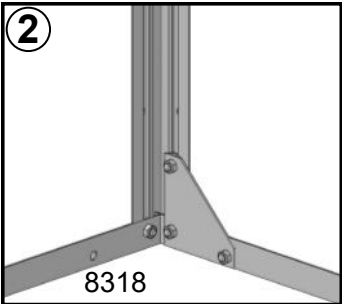
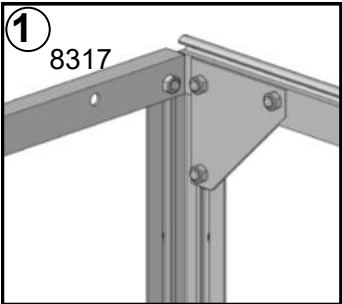
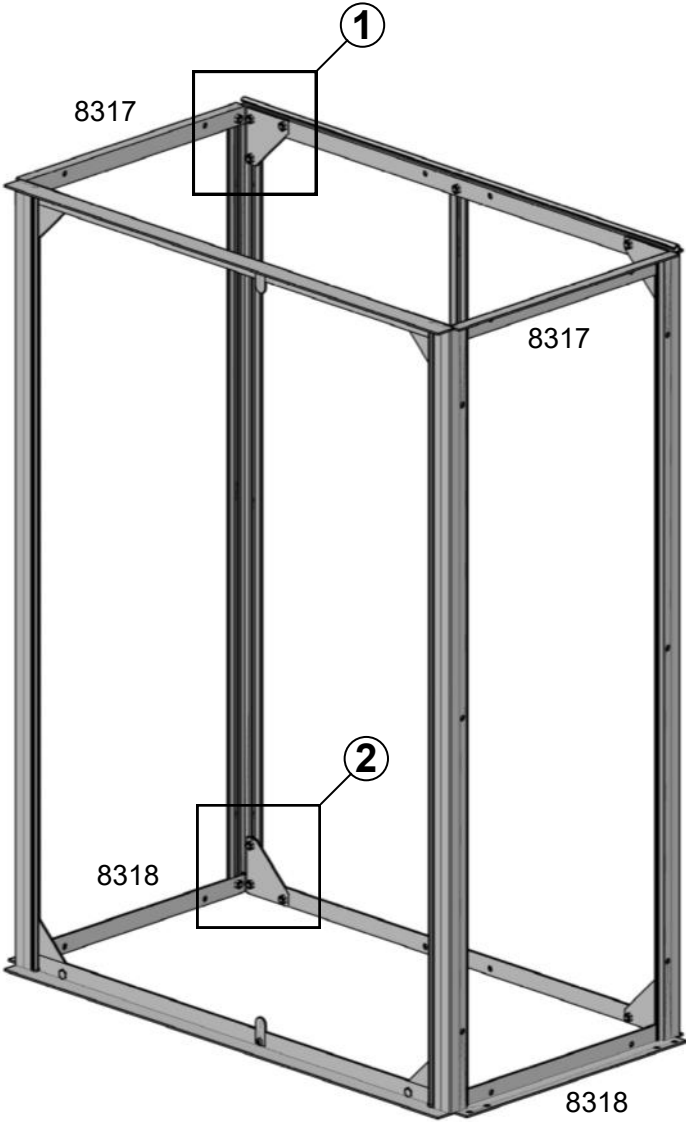


Rear Capping bar & PC Panel

									
#	8319	8320	8322	8323	8325	a1	a2	a3	Adhesive tape
Size	600	1000	600	1000	320	M6x10	M6	M6x15	---
EB212	1		2		4	4	10	6	
EB213		1		2	4	4	13	9	

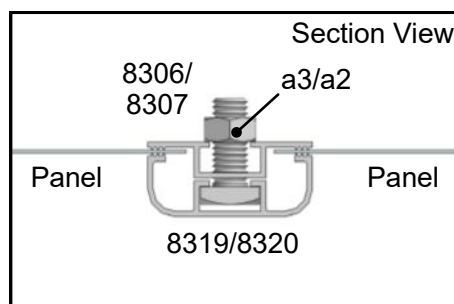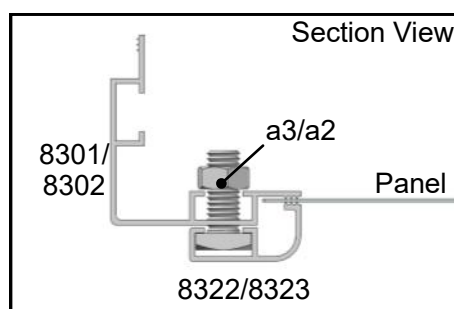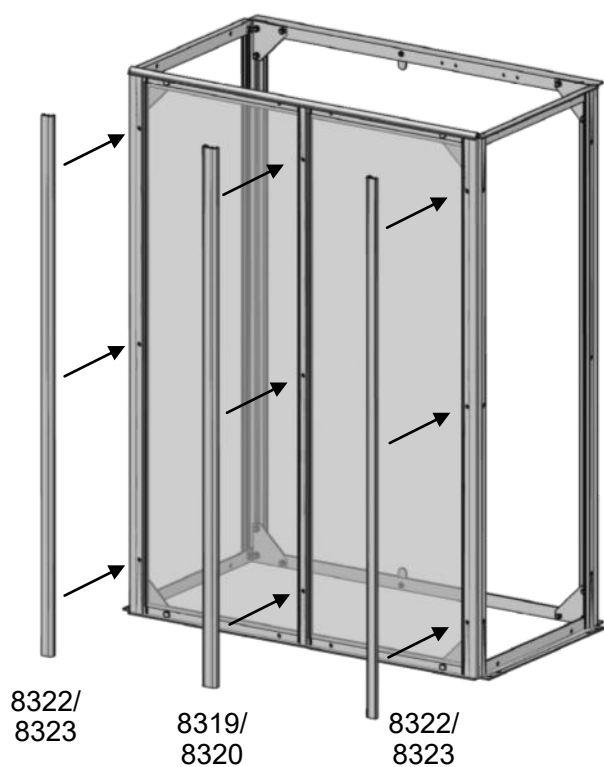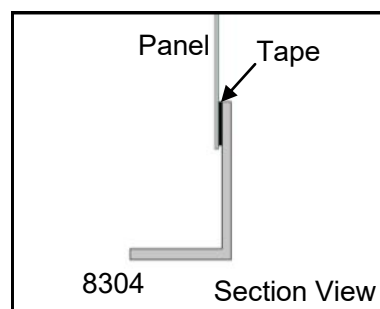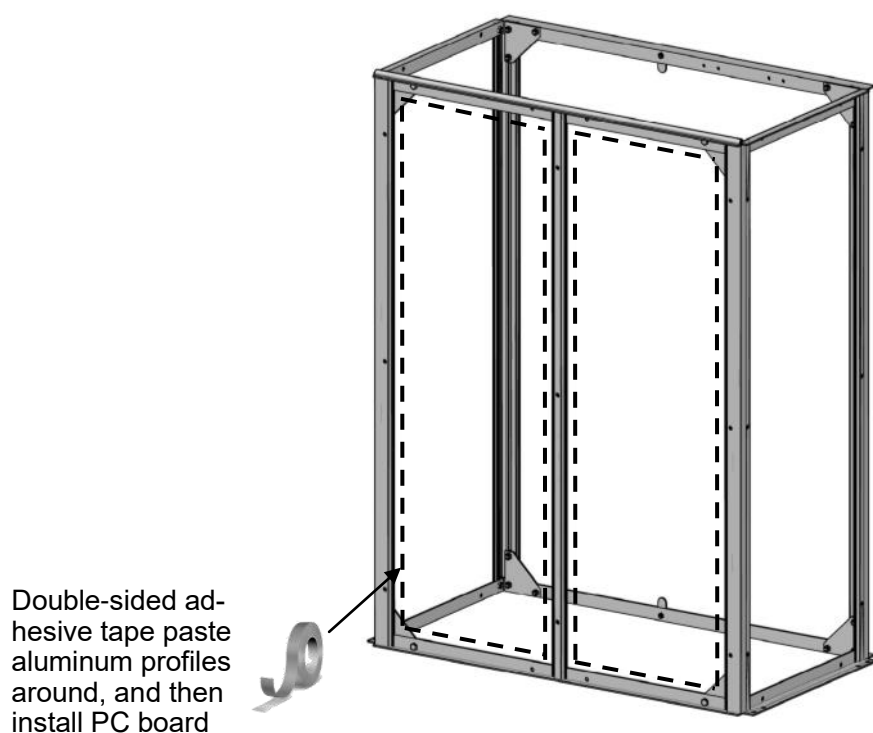


Rear Capping bar & PC Panel

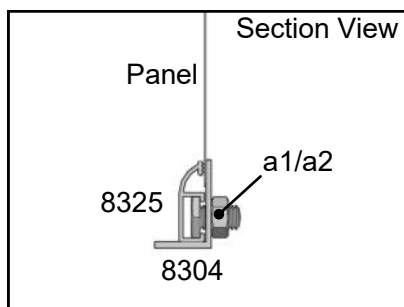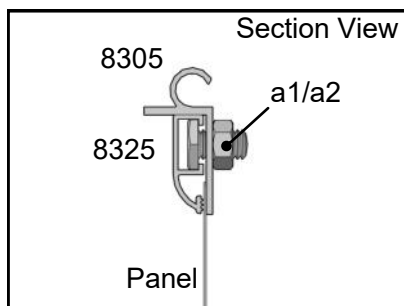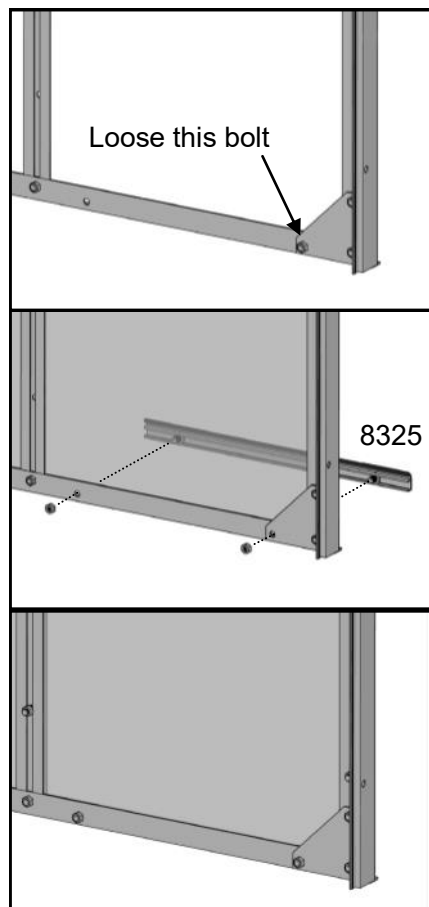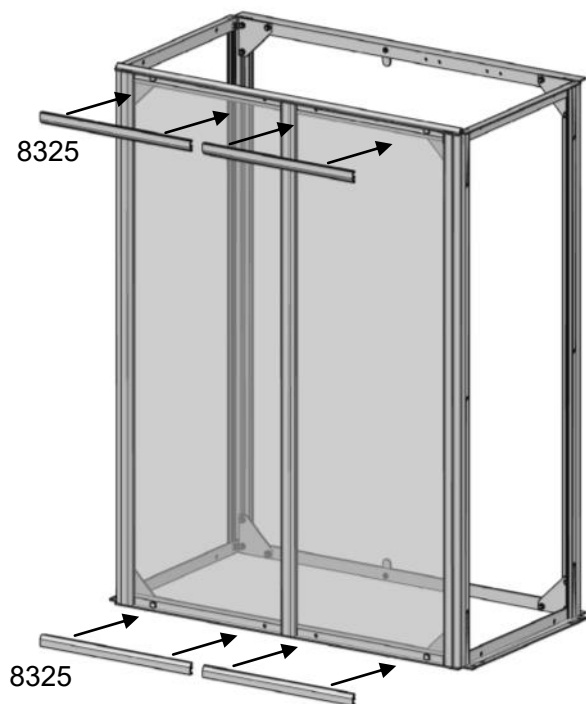


Side Capping bar & PC Panel

							
#	8322	8323	8325	a1	a2	a3	Adhesive tape
Size	600	1000	320	M6x10	M6	M6x15	---
EB212	4		4	8	16	8	
EB213		4	4	8	20	12	

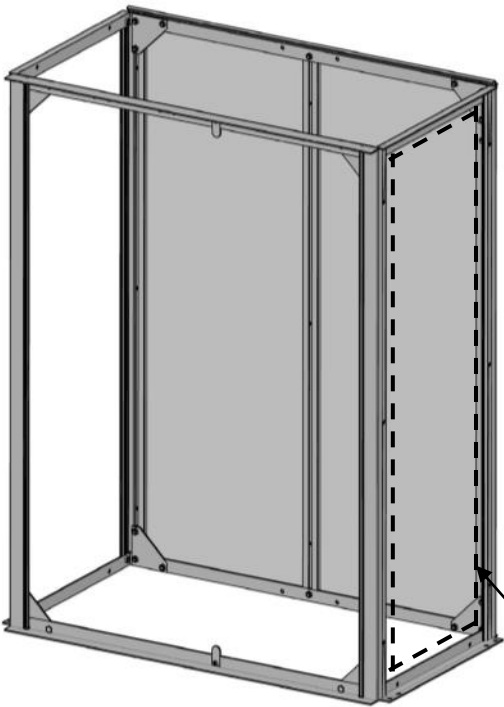


Double-sided adhesive tape paste aluminum profiles around, and then install PC board


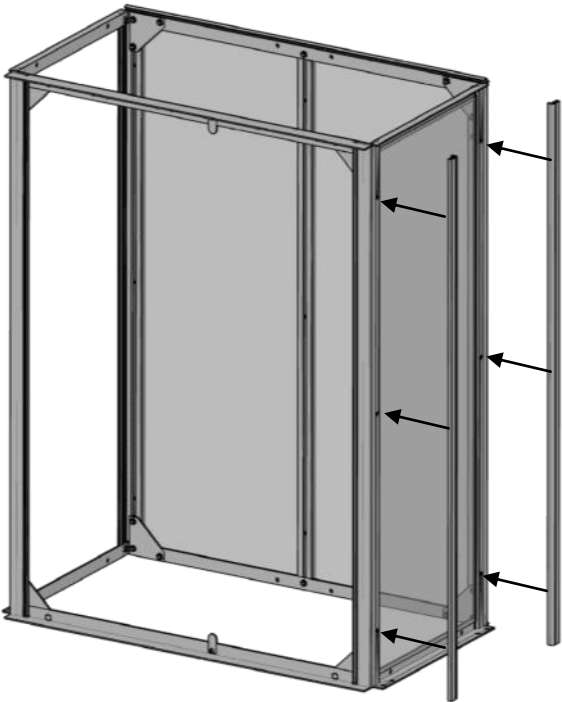


8322/
8323


8322/
8323



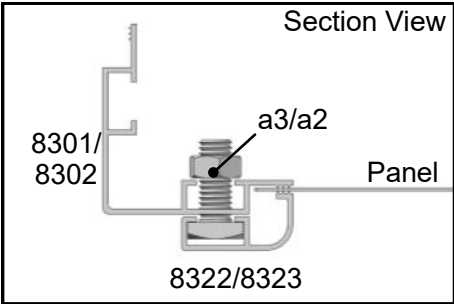


Side Capping bar & PC Panel

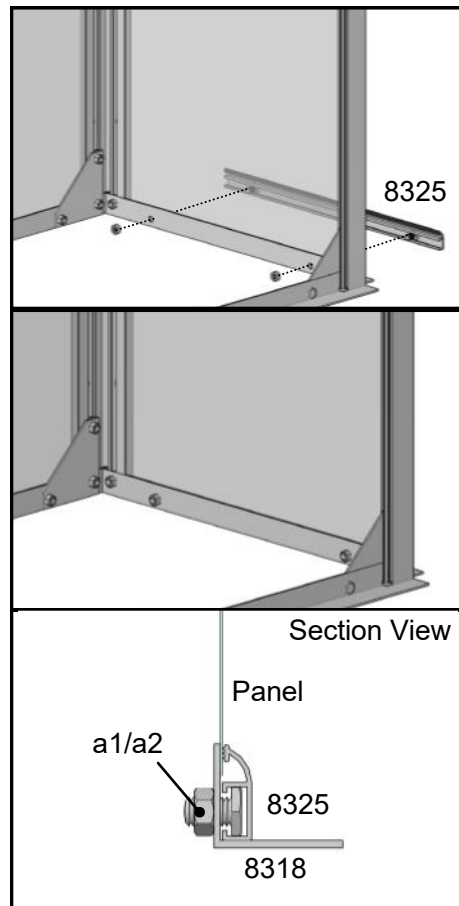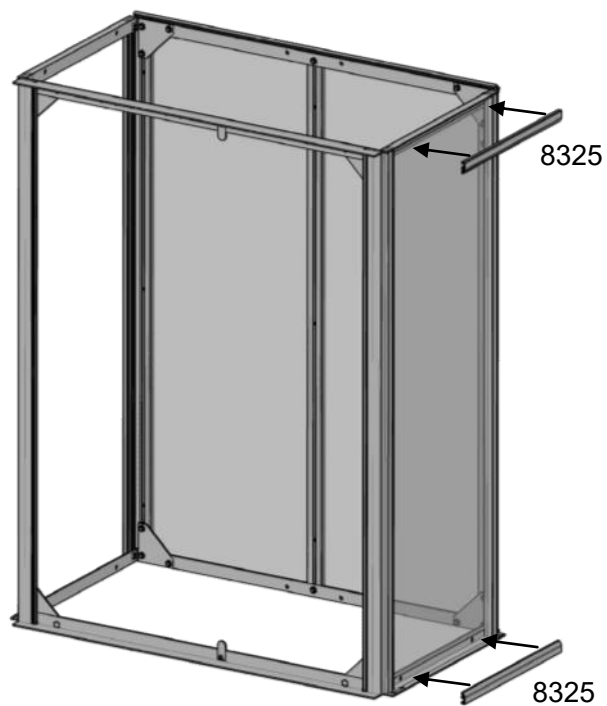


Door






													
#	8326	8327	8329	8330	8332	8333	8334	8335	a21	a22	a23	Magnet	Adhesive tape
Size	594	994	568	968	310.5	310.5	512	912	M6x6	M6x10	M6		---
EB212	2		2		4	4	4		16	8	24	2	
EB213		2		2	4	4		4	20	8	28	2	

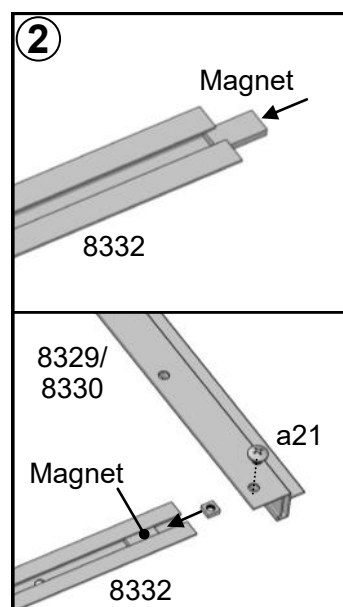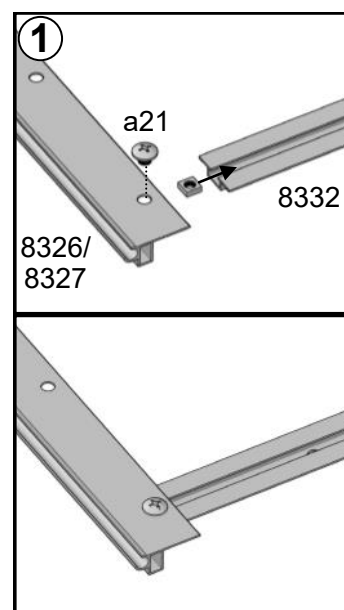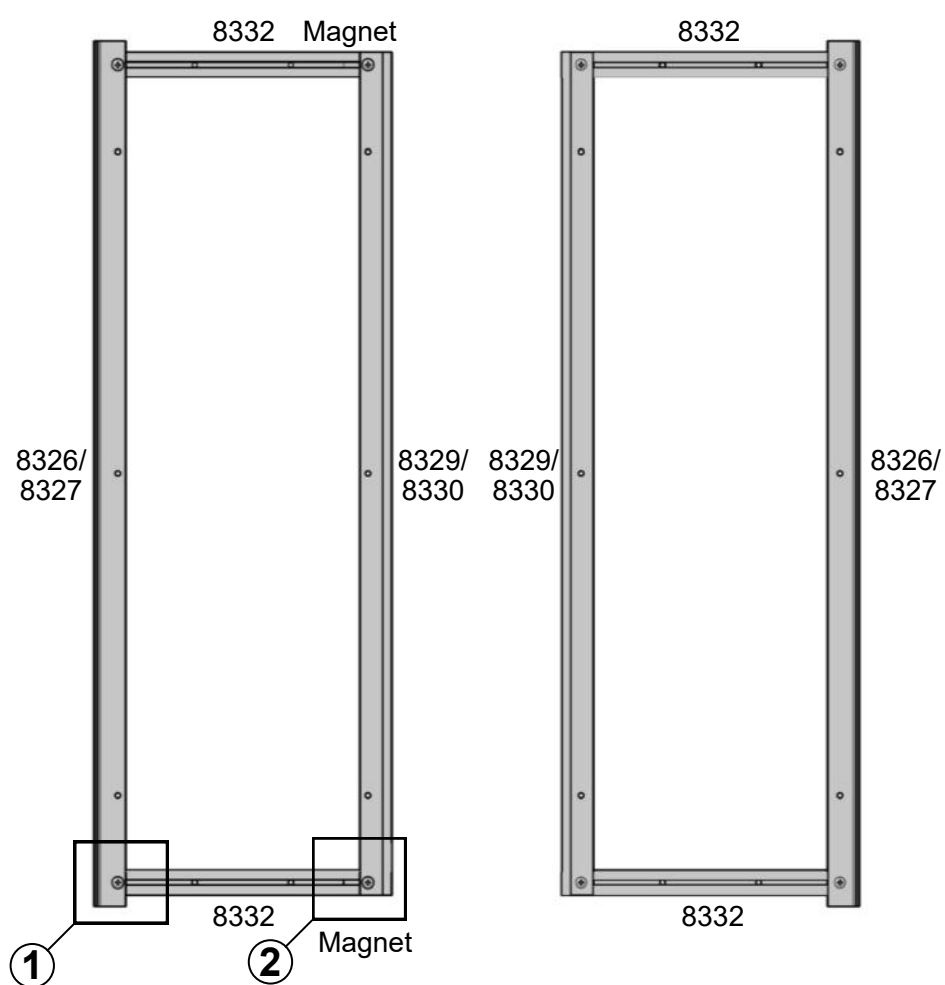



Door

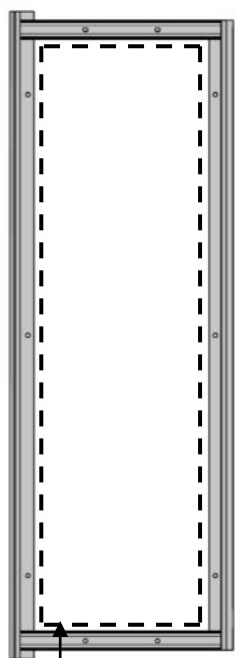


Double-sided adhesive tape paste aluminum profiles around, and then install PC board

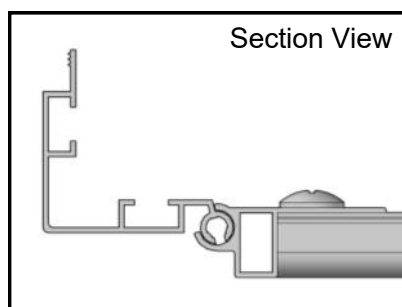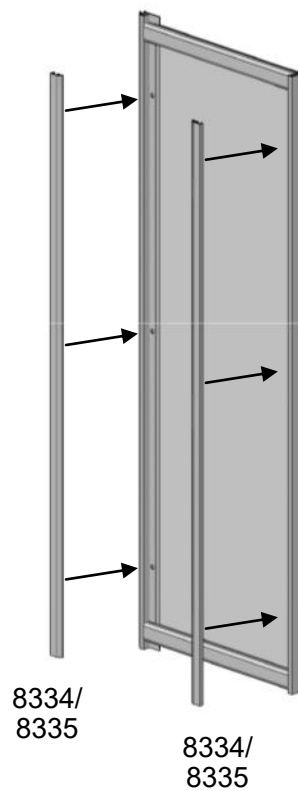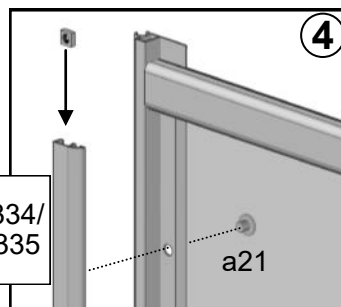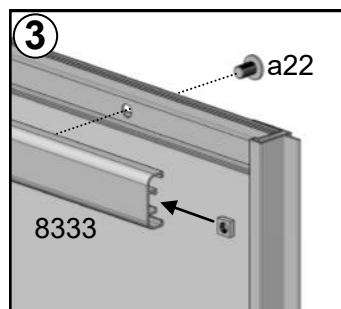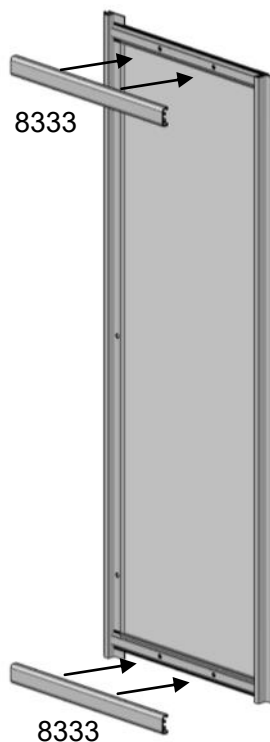

Loosen the bolts, remove the profile #8315




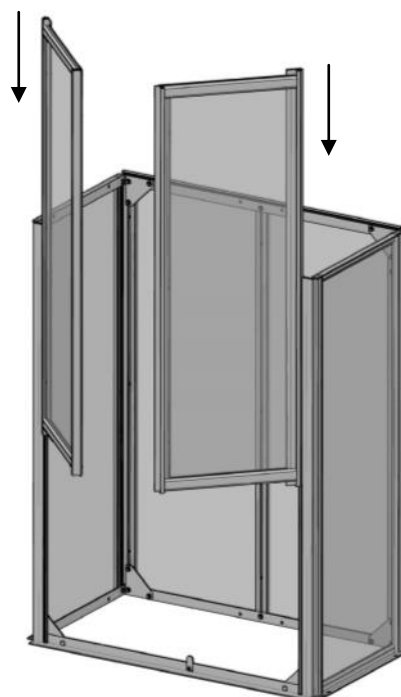
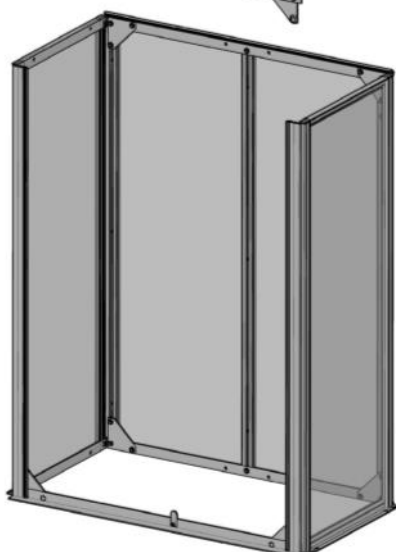


Assemble the profile #8315


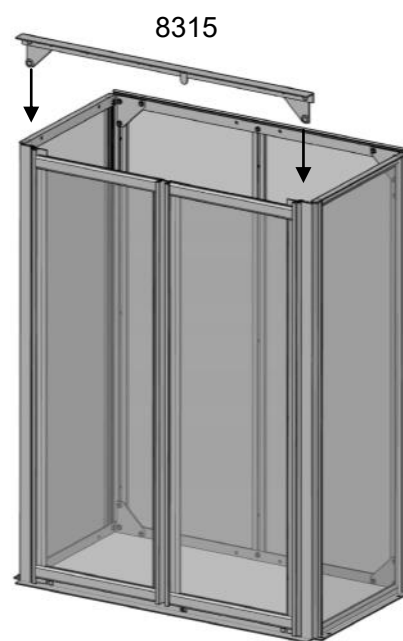


Vent








														
#	8337	8338	8339	8340	8341	8081	a21	a22	a23	a12	a7	a10	p12	Adhesive tape
Size	738	360	738	360	678	260	M6x6	M6x10	M6	Φ4.2X9.5	M4x8	M4	-	- - -
QTY	1	2	1	2	2	1	12	4	16	2	2	2	4	

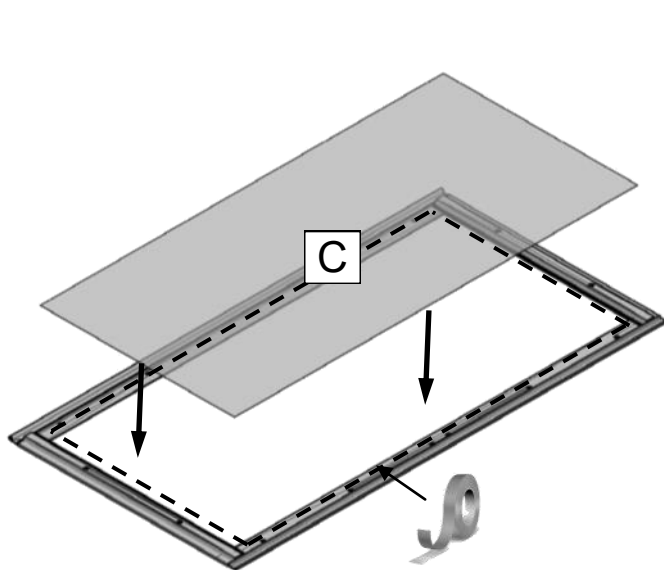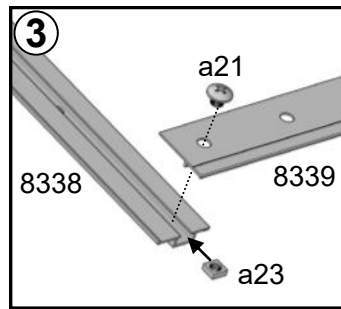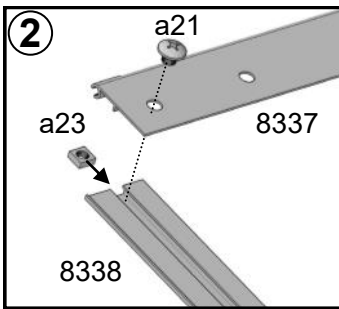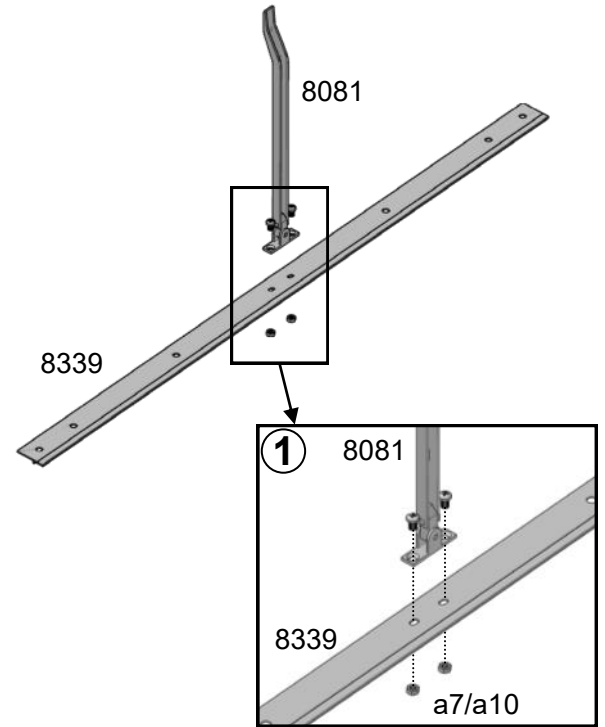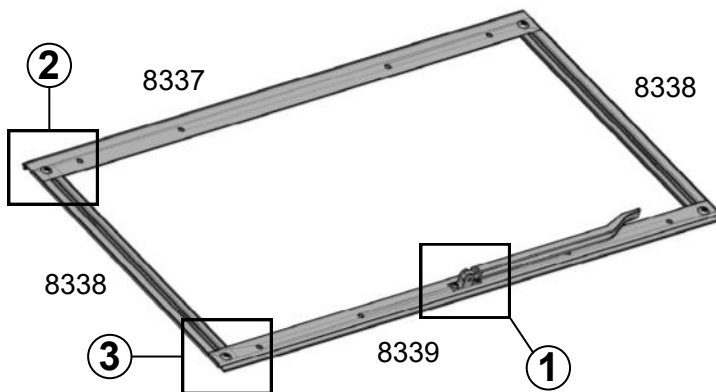

Double-sided adhesive tape paste aluminum profiles around, and then install PC board




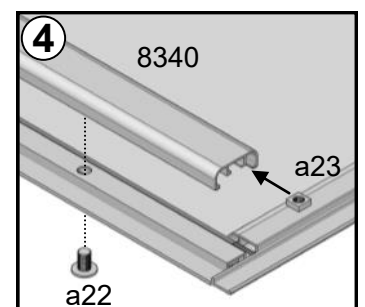
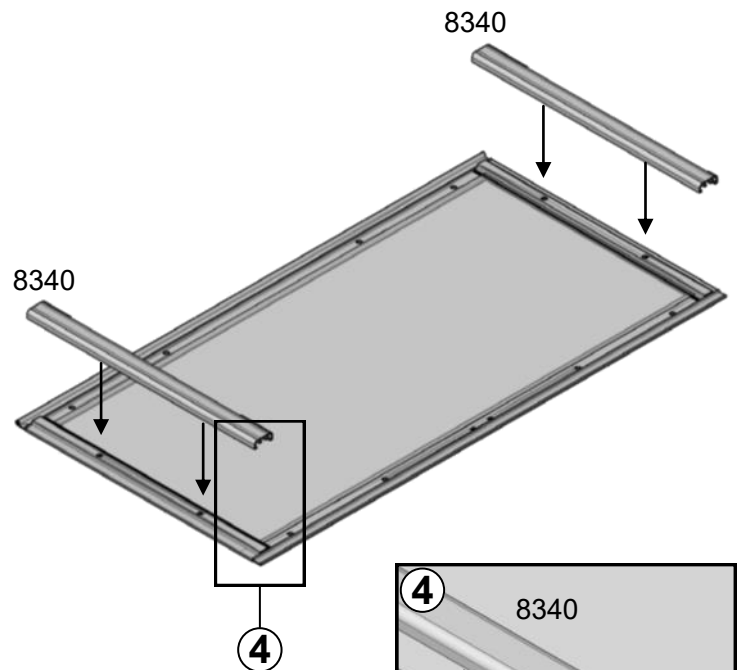


Vent

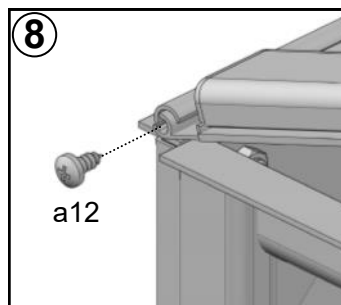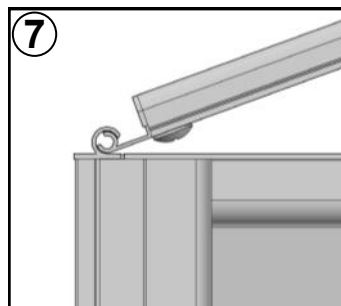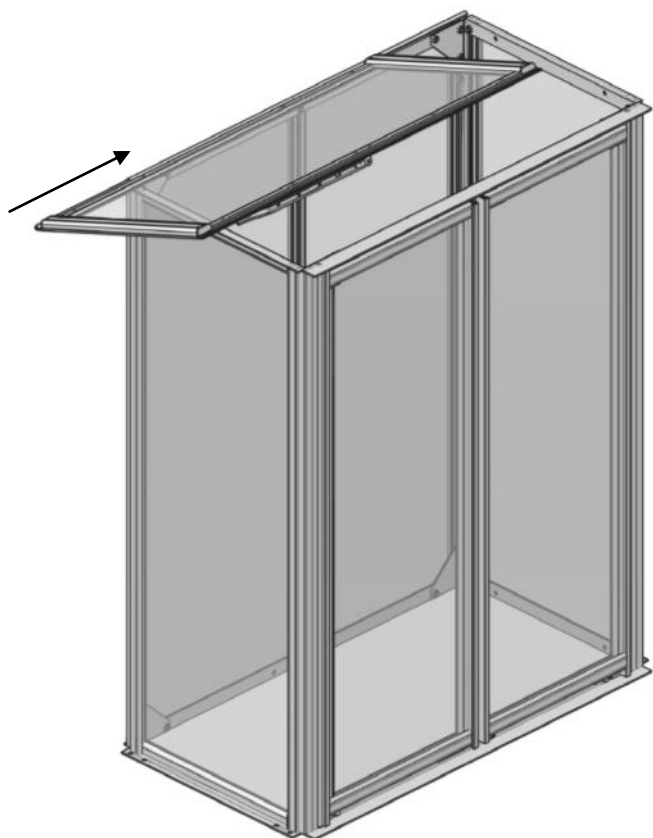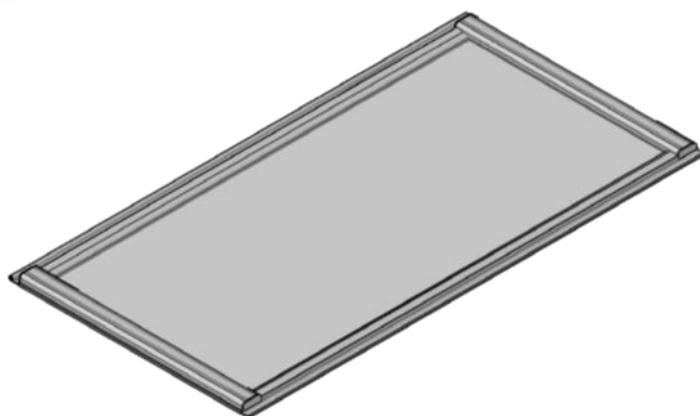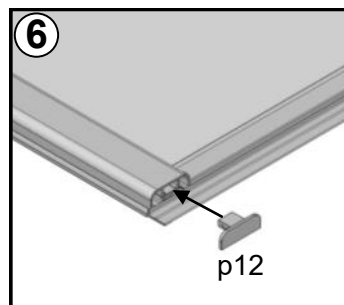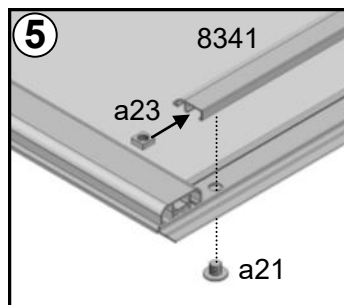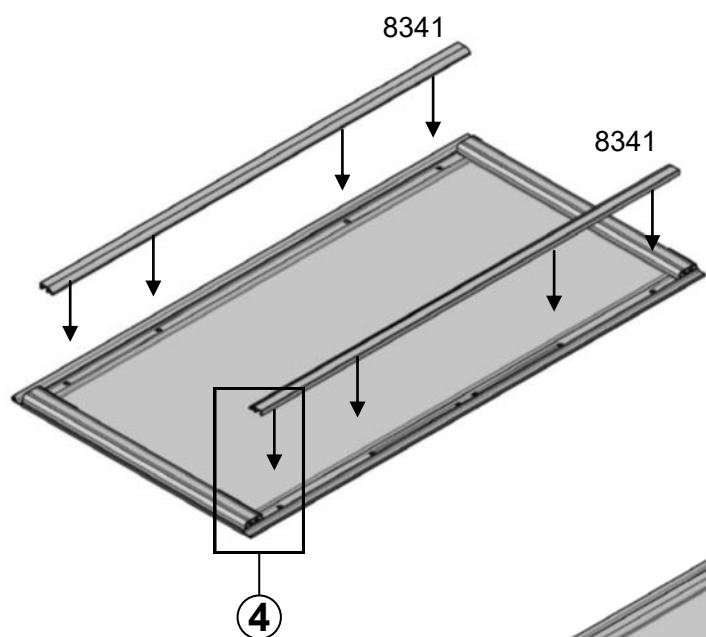



Option 1 Staging

					
#	8342	8343	a1	a2	a9
Size	362	720	M6x10	M6	M6x10
EB212	2	4	8	12	4
EB213	4	8	16	24	8

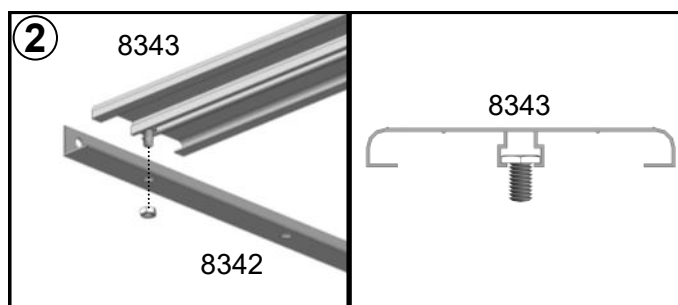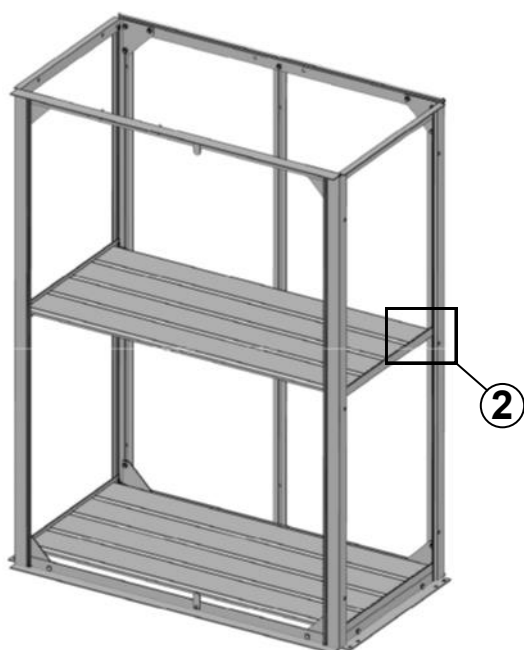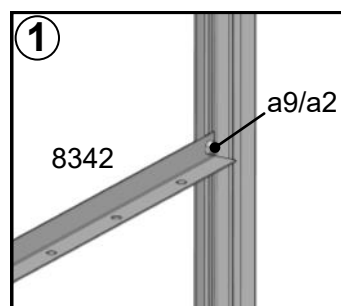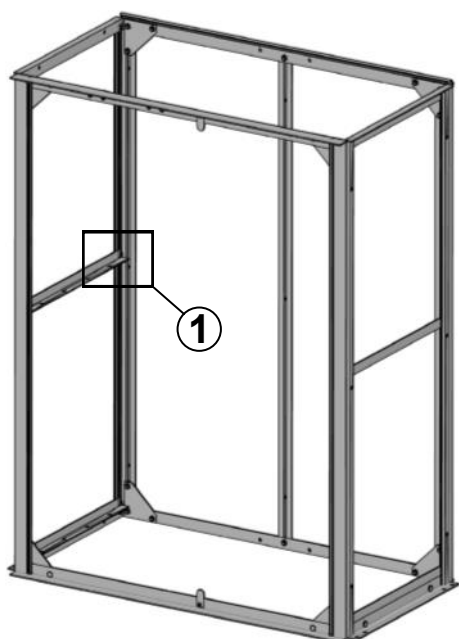
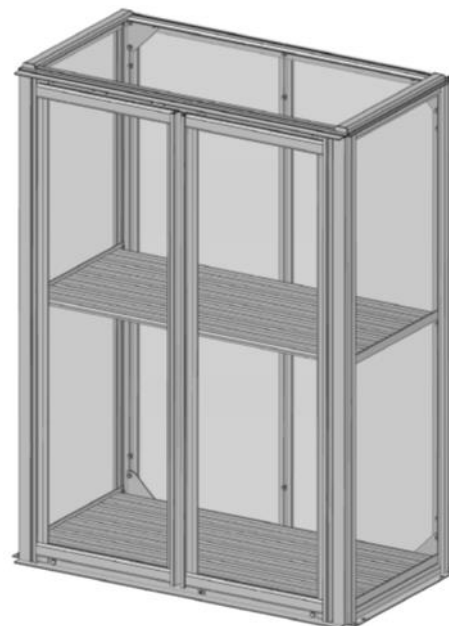


Option 2 Seed tray

				
#		8344	a2	a9
Size		710	M6	M6x10
EB212	6	4	10	10
EB213	9	6	15	15



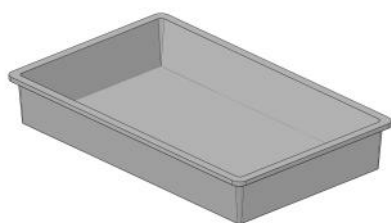
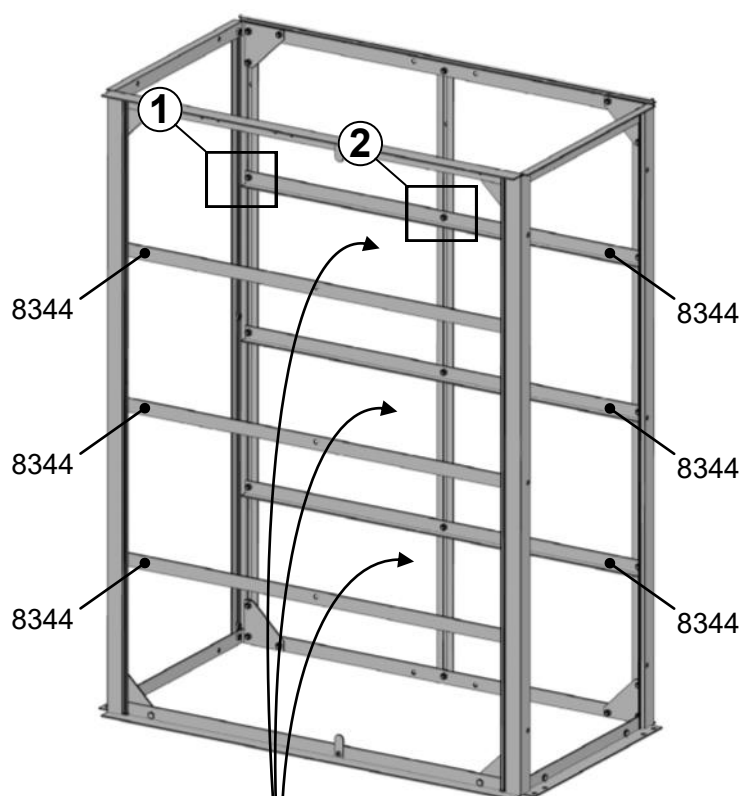


Seed trays are
put on each floor

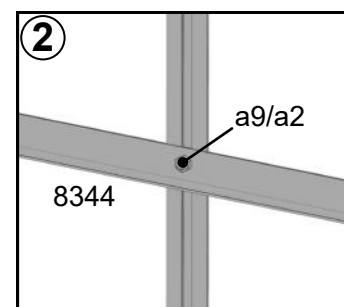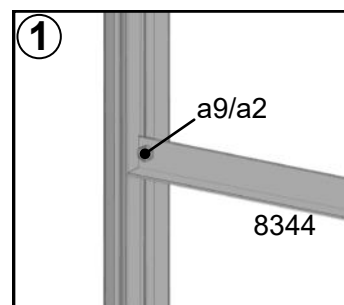

Option 3 Wheel

						
#	L	R		a1	a2	a31
Size	-	-	-	M6x10	M6	M6
QTY	2	2	4	16	16	16

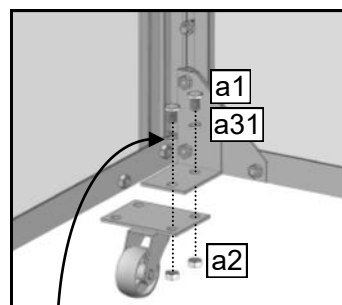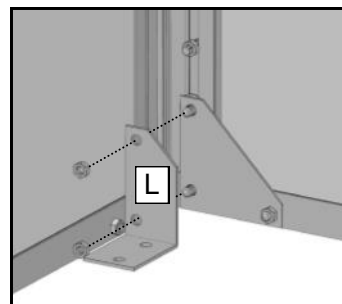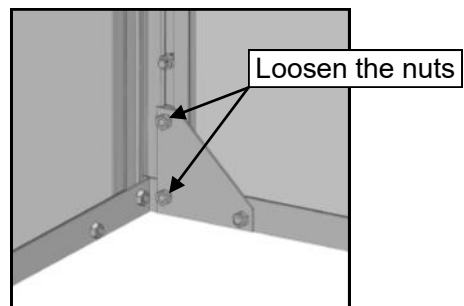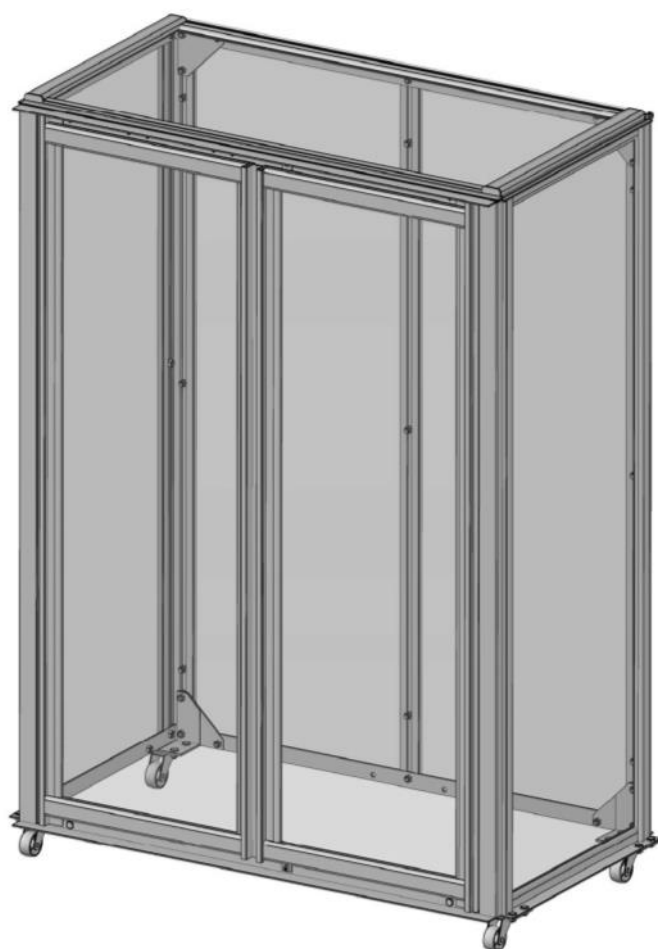

Note: It's important to install the spring washer in this position.

