


EB Series Greenhouse



Assembly instructions

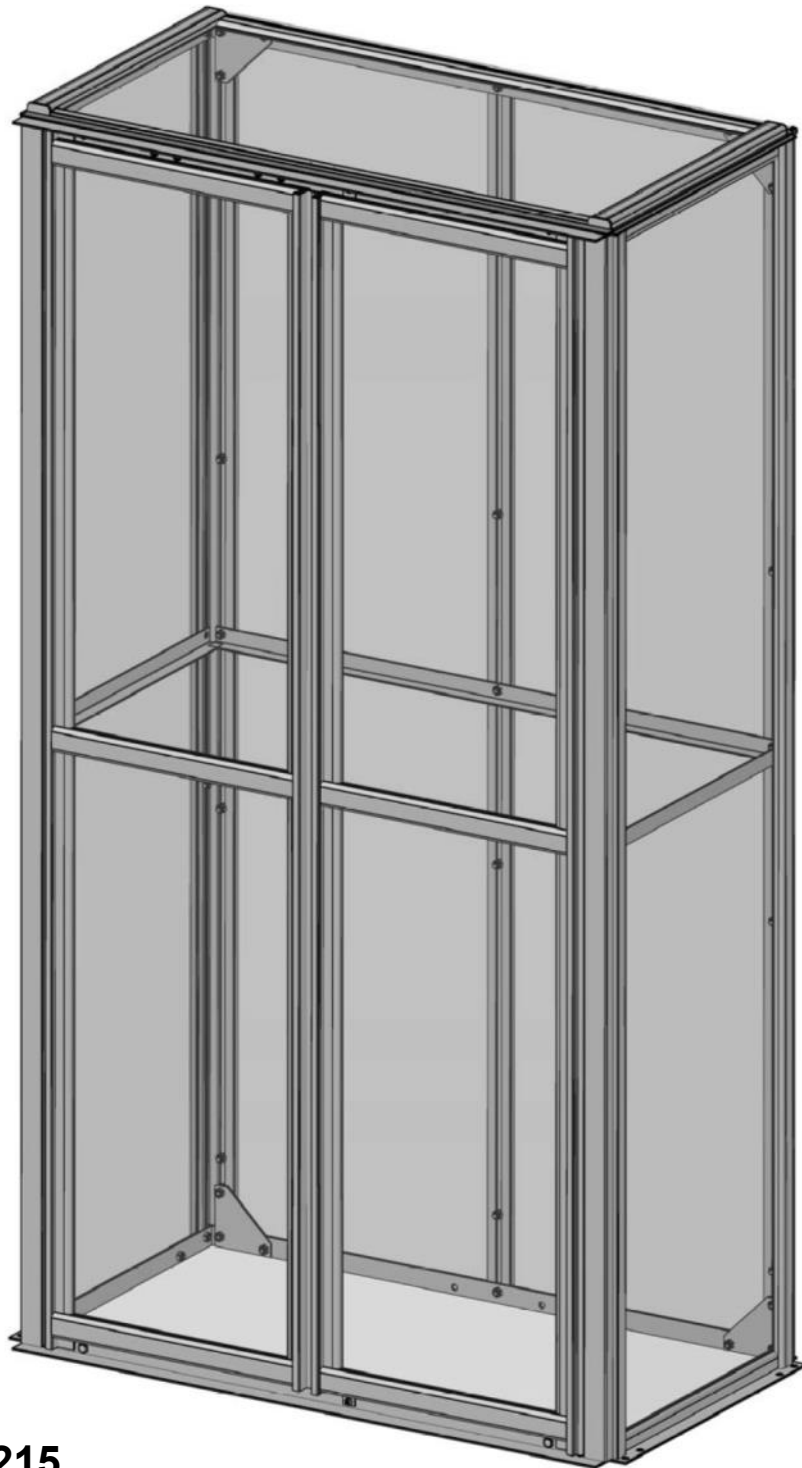

Model EB215

Size: 766x415x1411MM

Polycarbonate sheet

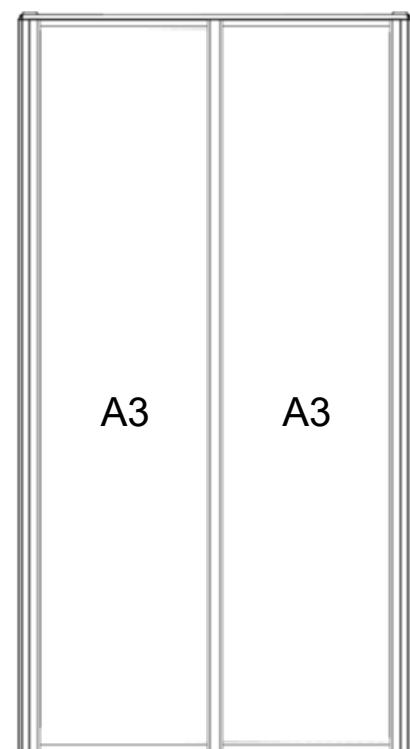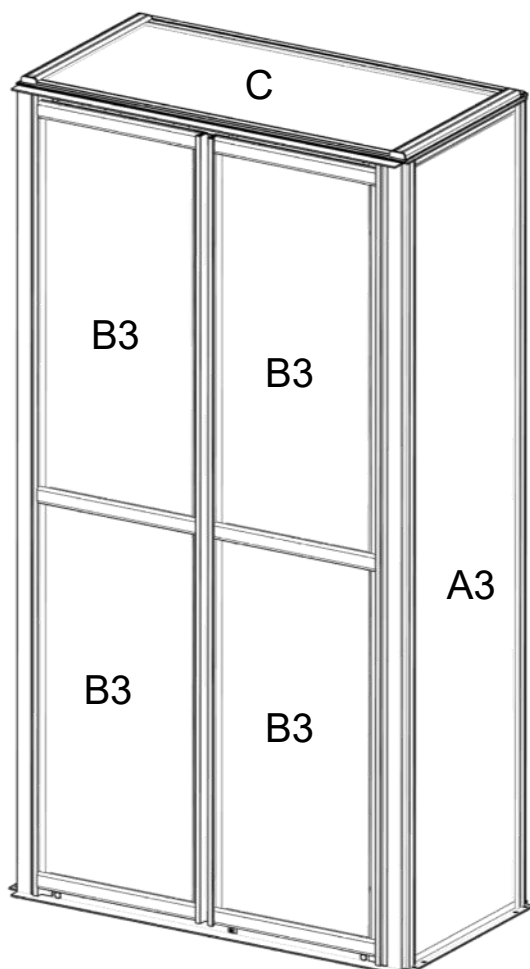








Step of PC panel assembly:

1. Remove approximately 20mm of protective film from both sides of all polycarbonate panel edges before installing to avoid scratching. Remove all protective film immediately after the constructions is completed.
2. Put double-sided adhesive tape together with masking paper on Alu. Frame first. Don't peel off masking paper from tape until polycarbonate panel in position.
3. After polycarbonate panel in position, please tear off masking paper of tape. Then double sided adhesive tape will stick Alu. Frame and polycarbonate panel firmly.
4. Finally, use Alu. capping bar to fix polycarbonate panel on Alu. Frame by bolt and nut tightly.

#	Size	EB215
A3	333 x 1372	4
B3	283 x 655	4
C	333 x 691	1
Adhesive tape	15000 x 6 x 0.1	2 roll


Rear

									
#	8303	8304	8305	8308	8345	8300	a1	a2	a16
Size	1400	734	734	1400	710	-	M6x10	M6	-
QTY	2	1	1	1	1	4	17	17	4

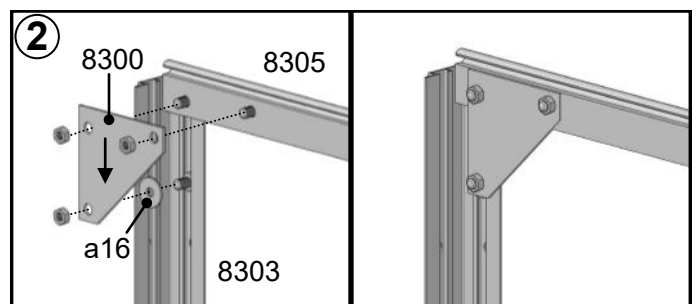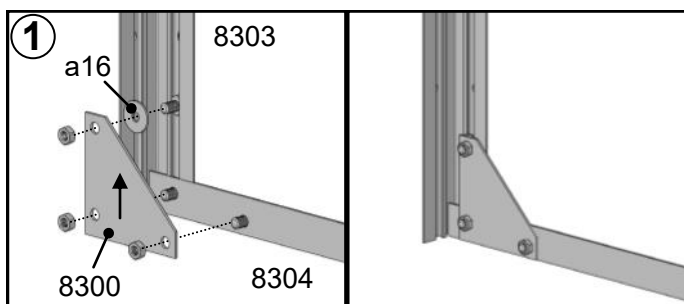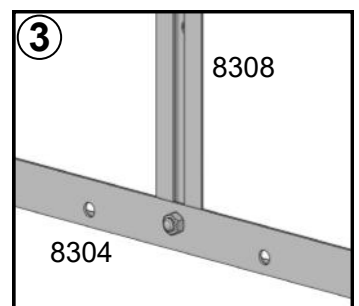
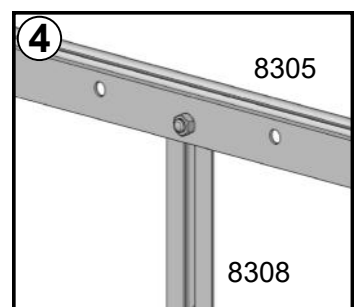
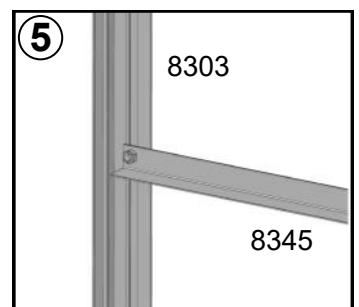
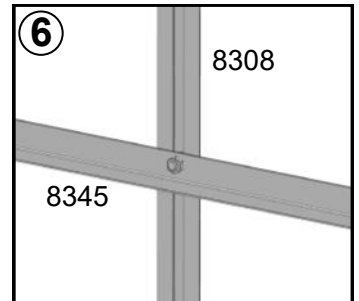
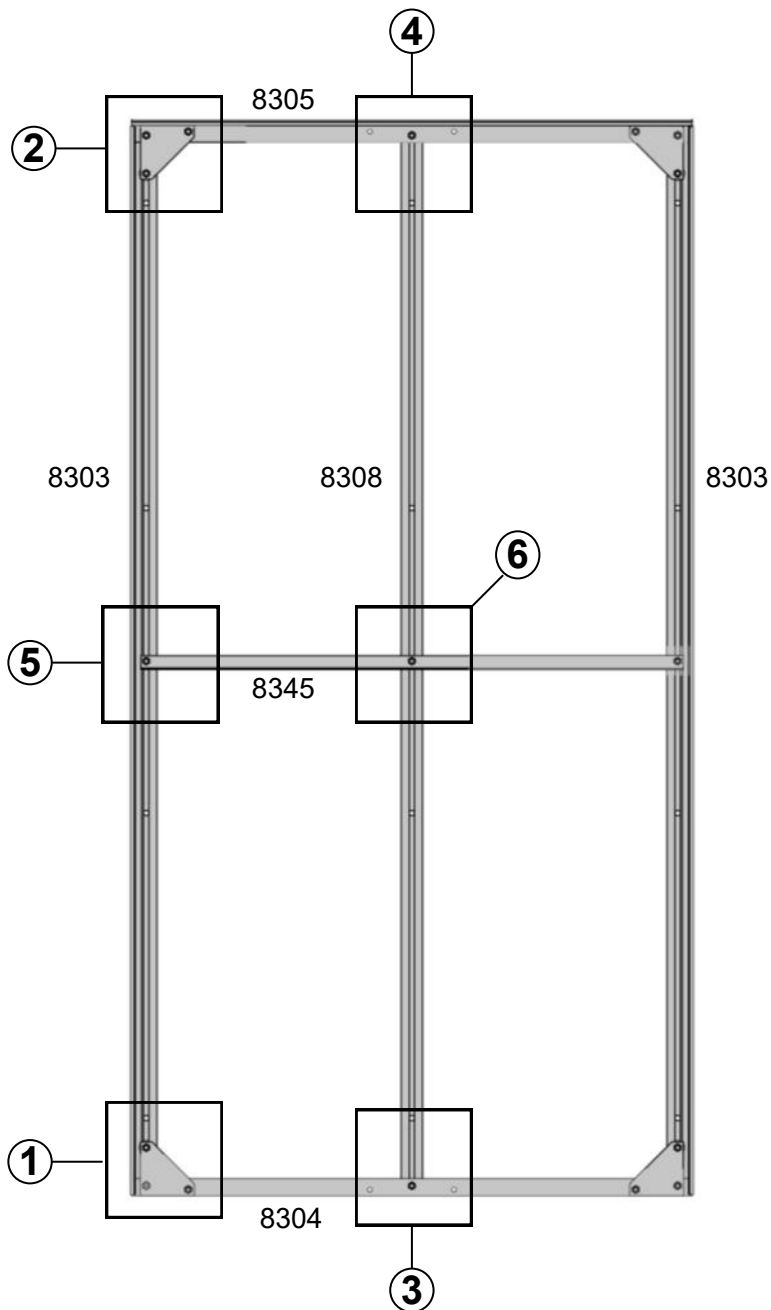


Front

													
#	8313	8314	8315	8316	8300	m11	a1	a2	a7	a10	a12	a16	8082
Size	1400	1400	734	734	-	-	M6x10	M6	M4x8	M4	Φ4.2X9.5	-	-
QTY	1	1	1	1	4	2	12	12	6	6	2	4	2




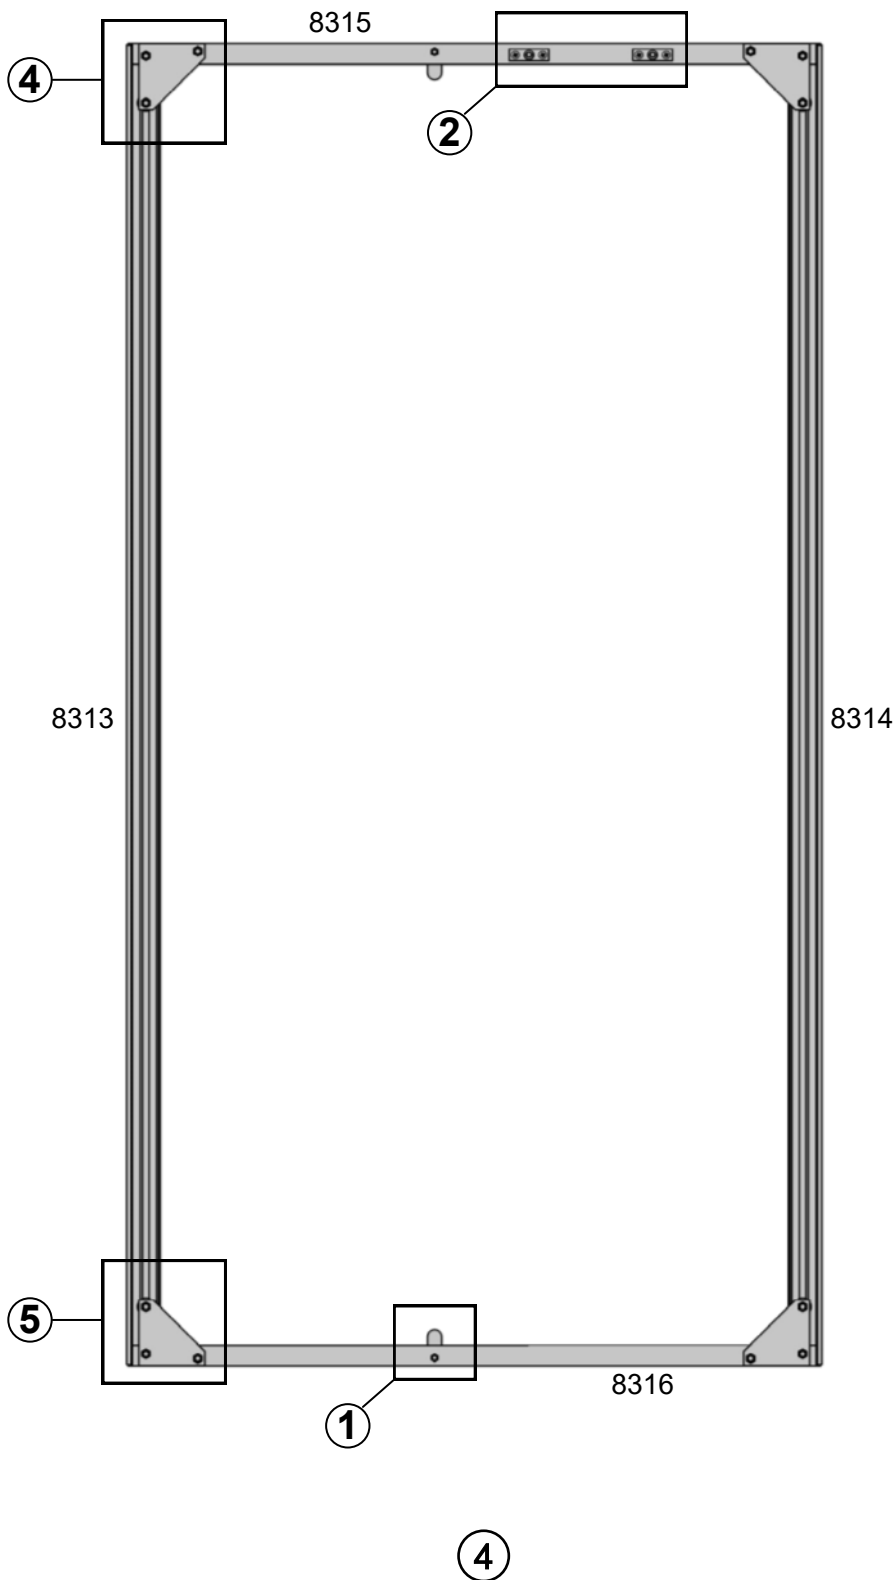


Front

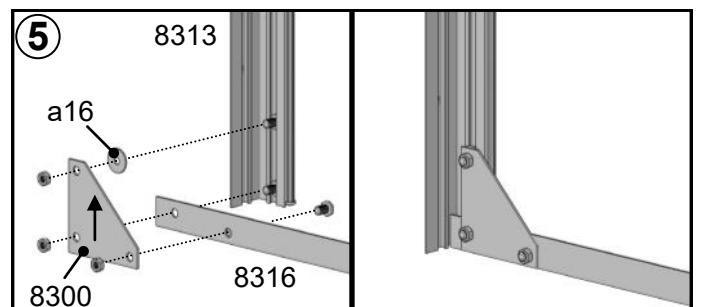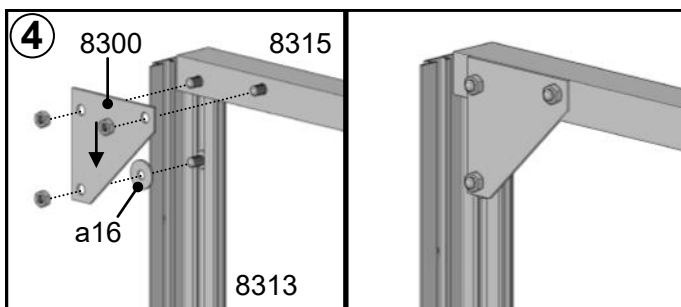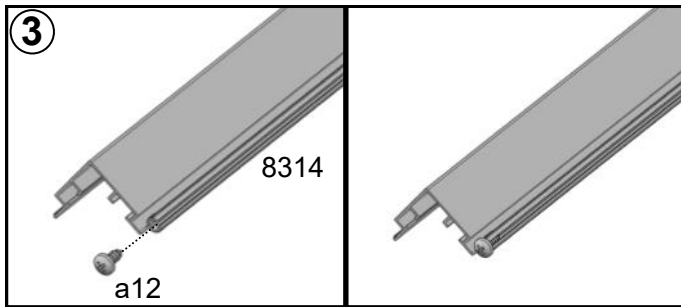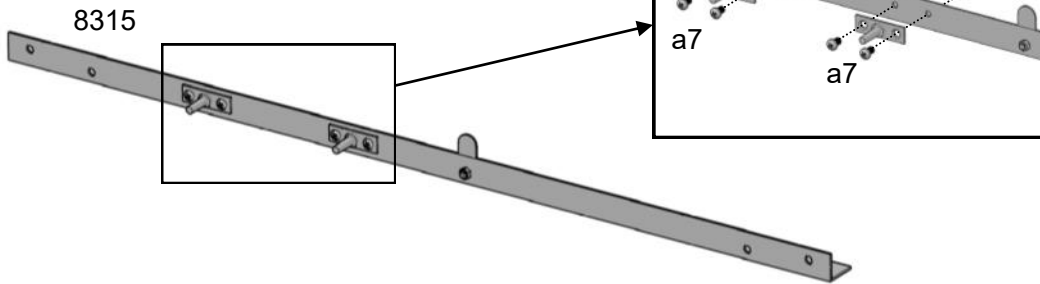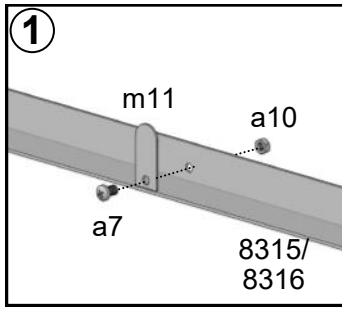






Side

					
#	8317	8318	8346	a1	a2
Size	372	372	362	M6x10	M6
QTY	2	2	2	12	12

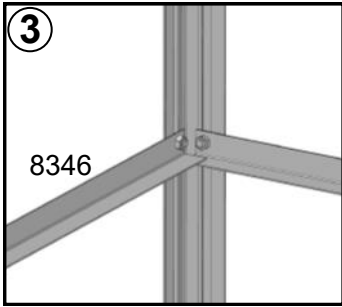
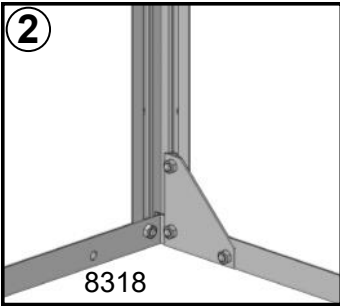
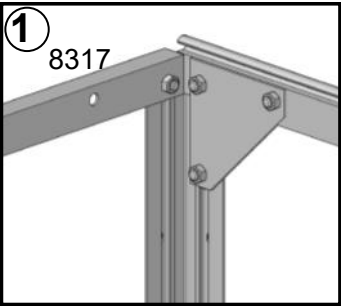
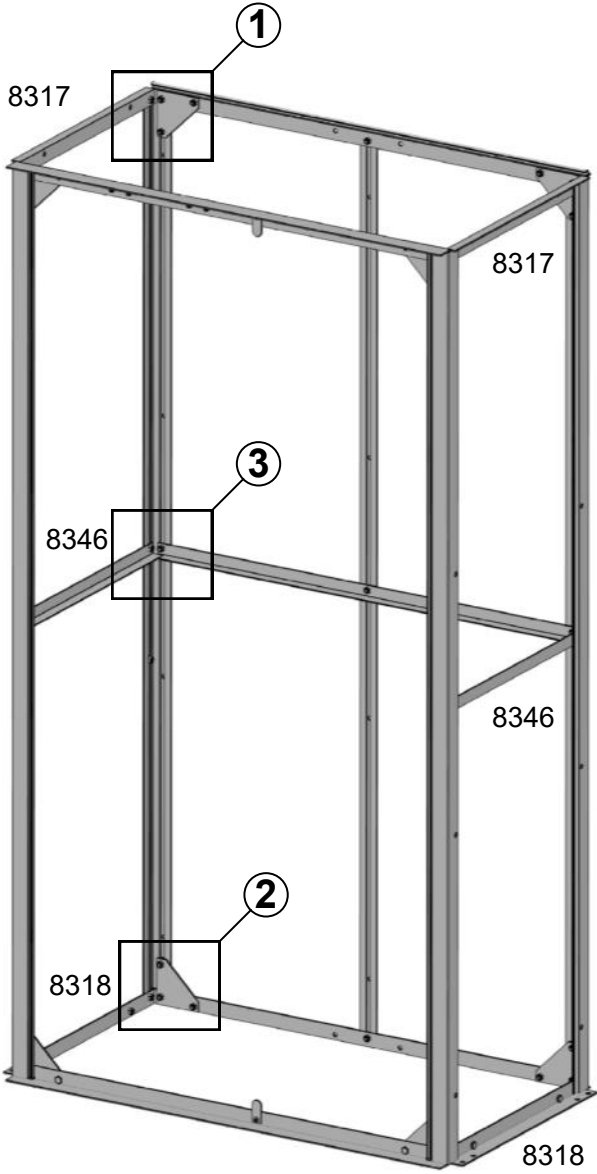


Rear Capping bar & PC Panel

							
#	8321	8324	8325	a1	a2	a3	Adhesive tape
Size	1400	1400	320	M6x10	M6	M6x15	---
QTY	1	2	4	4	16	12	

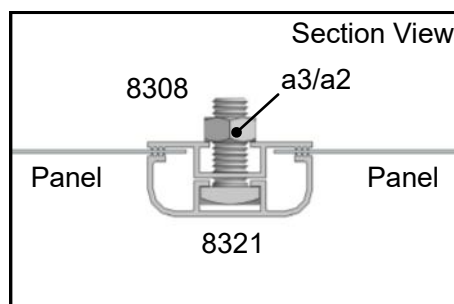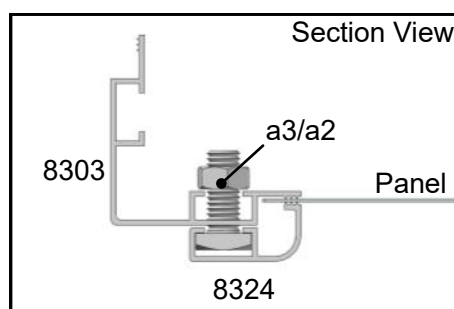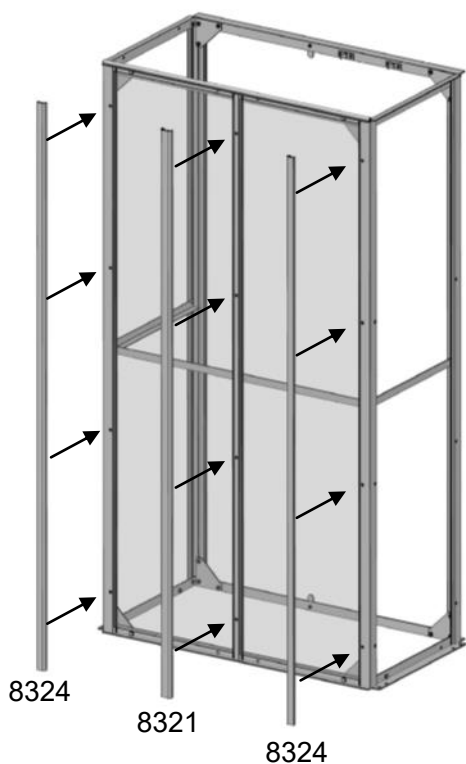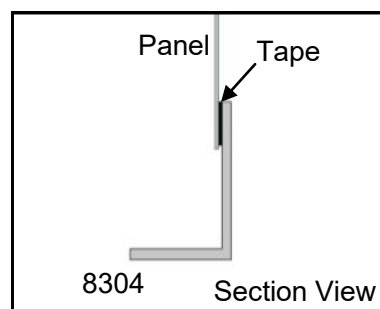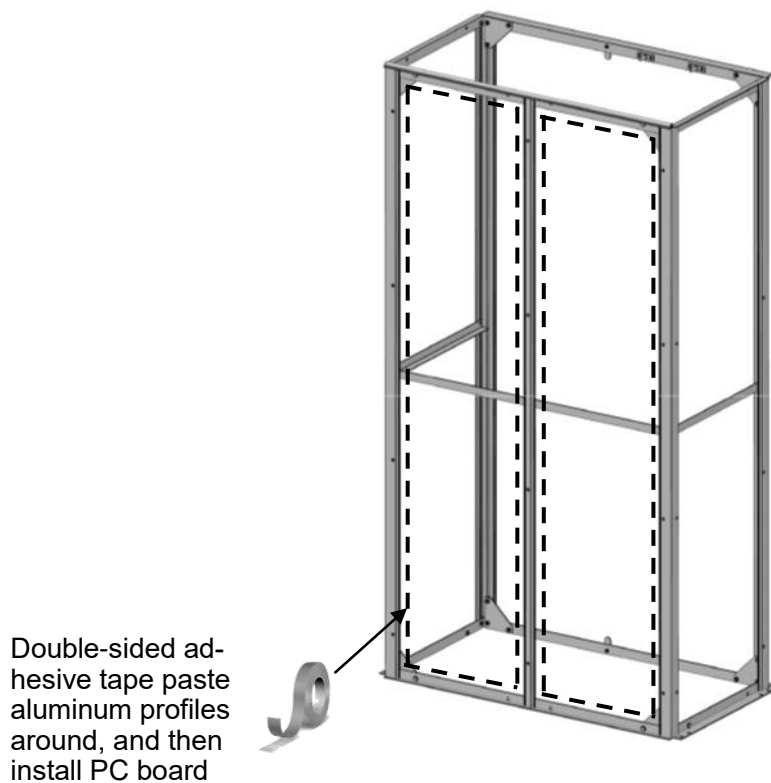


Rear Capping bar & PC Panel

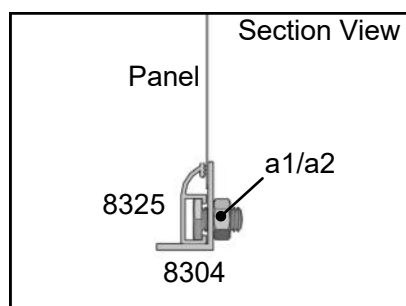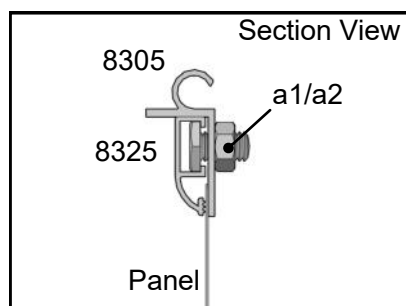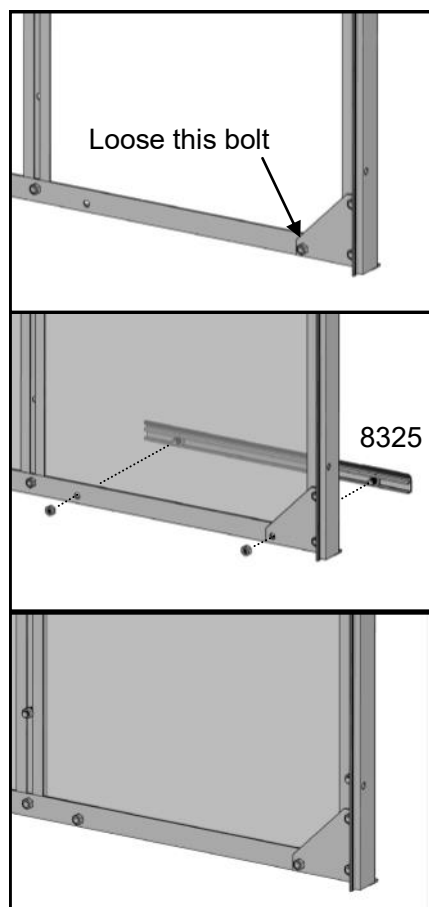
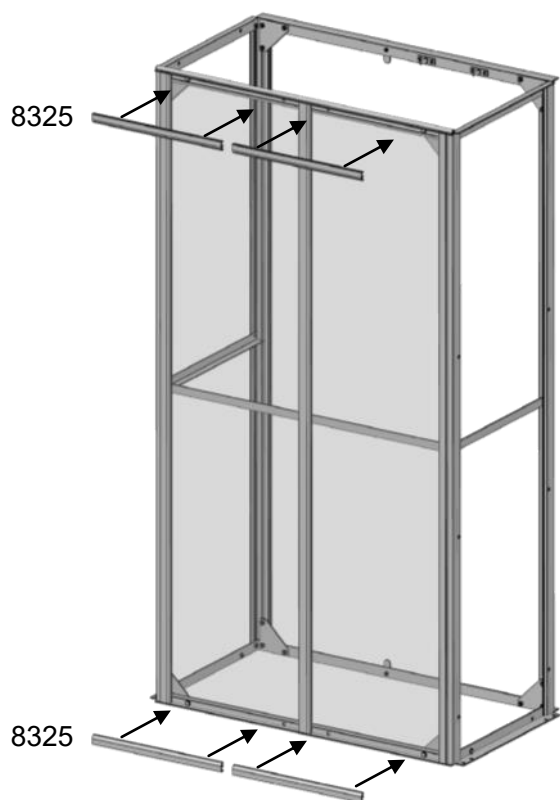


Side Capping bar & PC Panel



						
#	8324	8325	a1	a2	a3	Adhesive tape
Size	1400	320	M6x10	M6	M6x15	---
QTY	4	4	8	24	16	

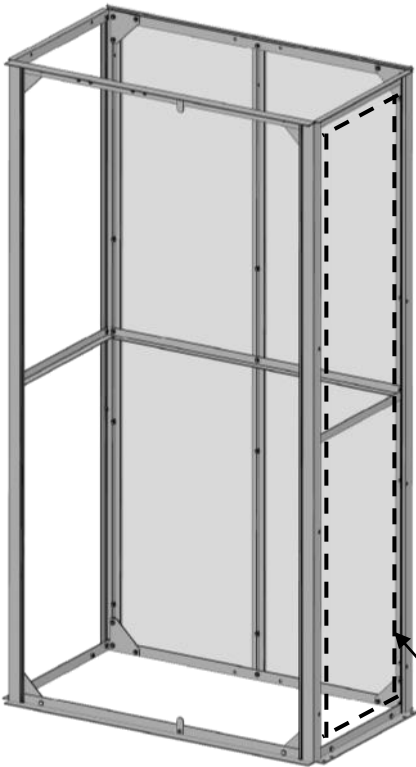

Double-sided adhesive tape paste aluminum profiles around, and then install PC board





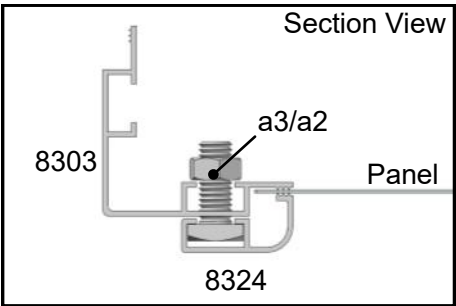
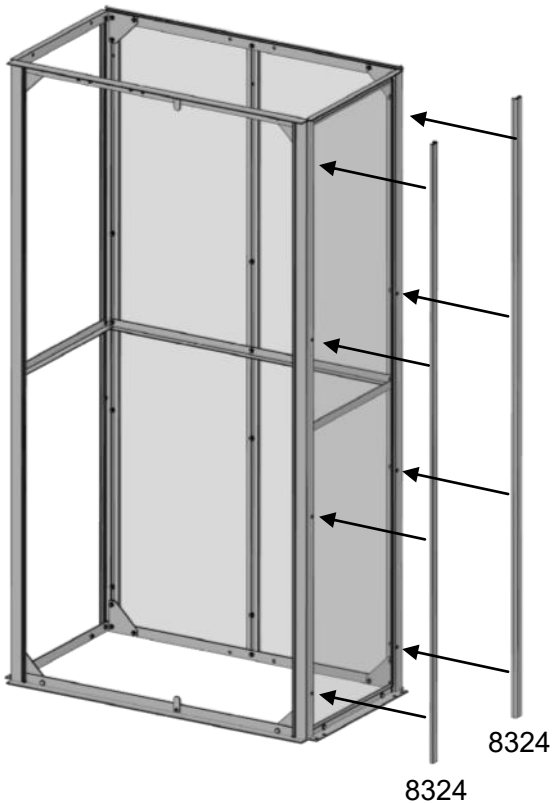


Side Capping bar & PC Panel

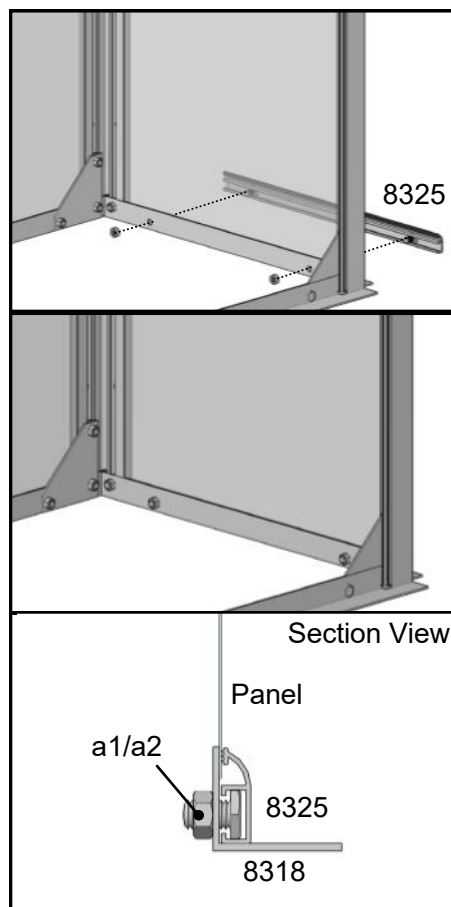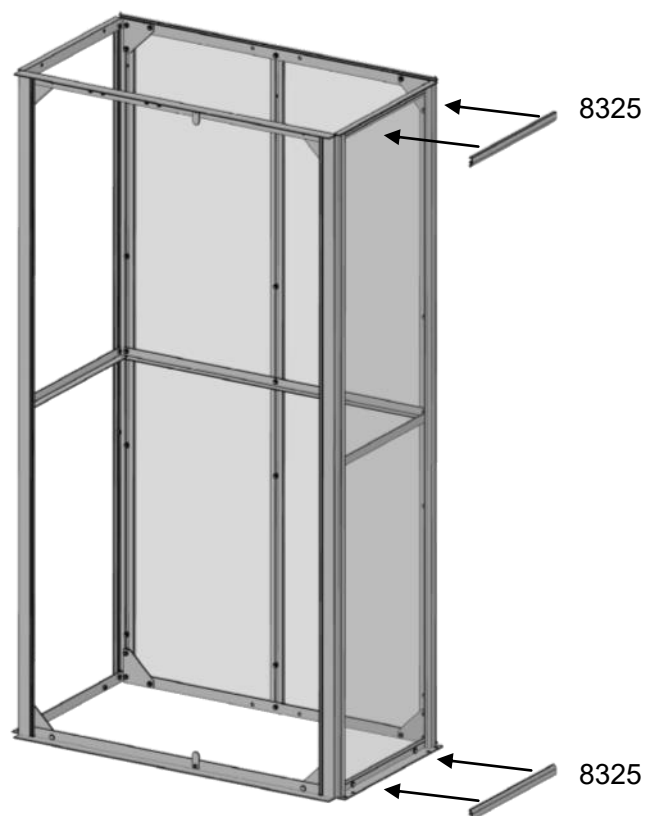


Door

										
#	8328	8331	8332	8333	8336	a21	a22	a23	Magnet	Adhesive tape
Size	1394	1368	310.5	310.5	642	M6x6	M6x10	M6		---
BE215	2	2	6	6	8	28	12	40	2	

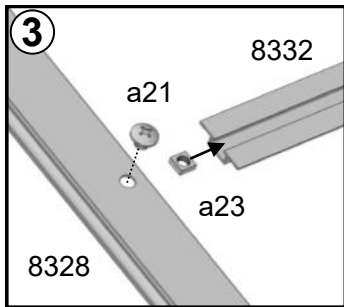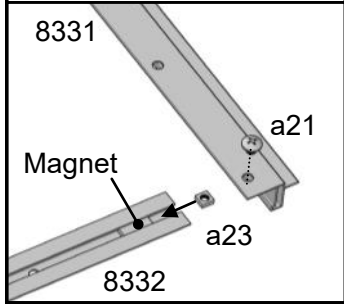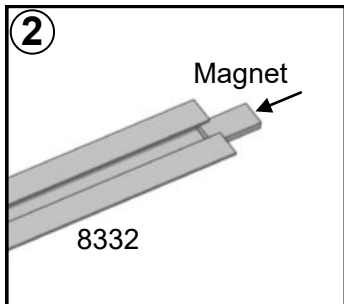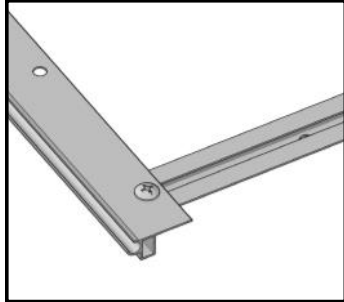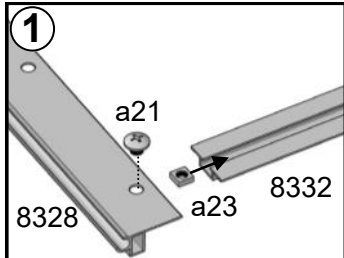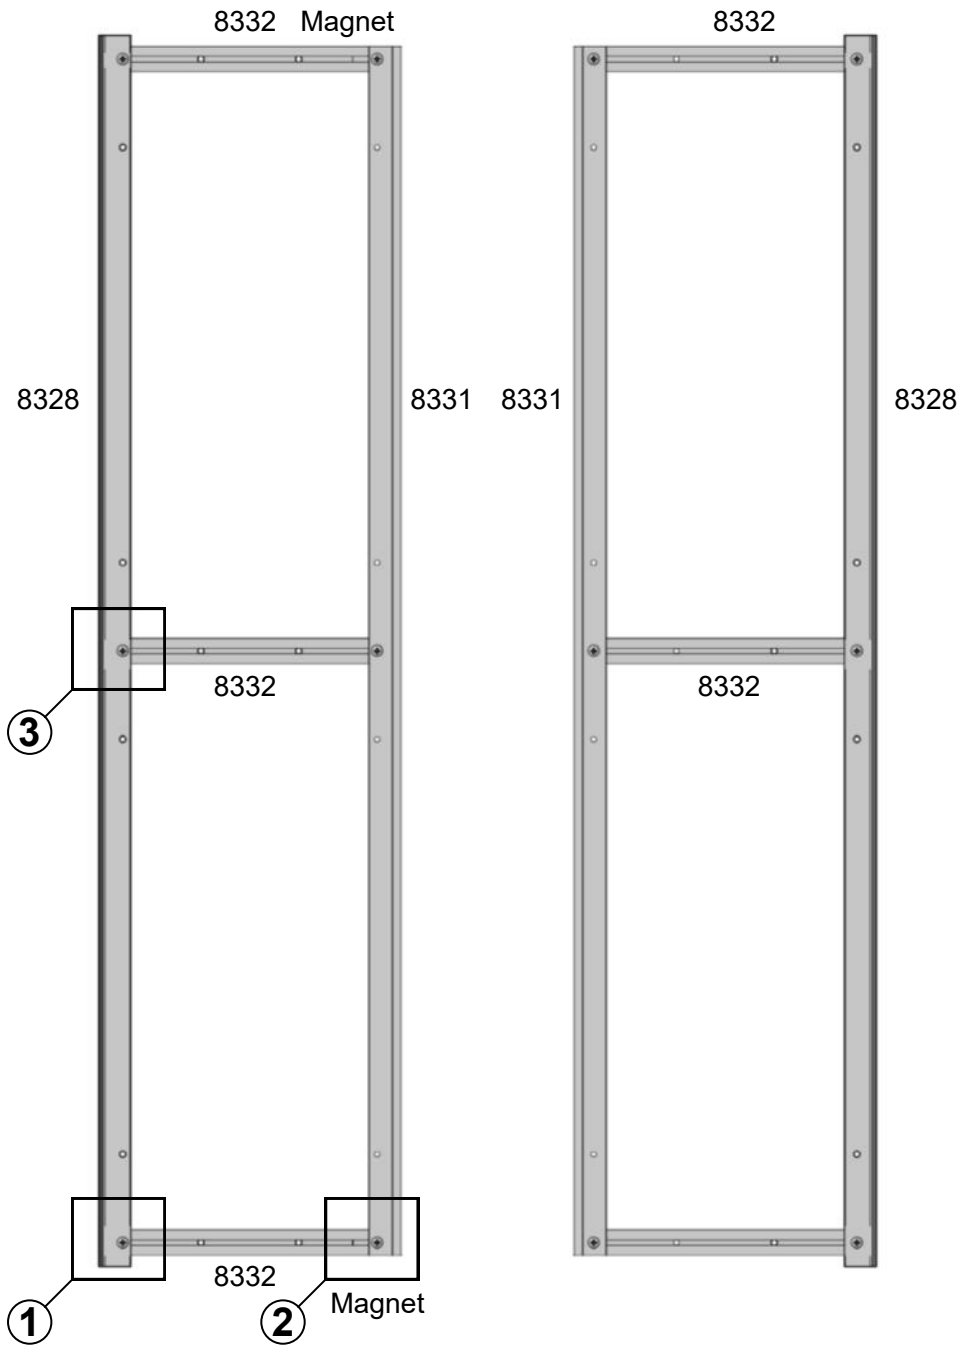



Door

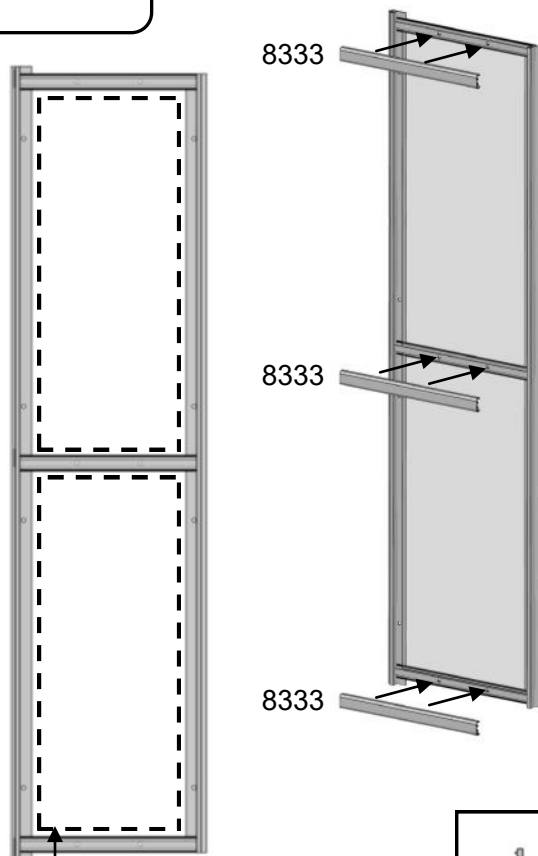

8333


8333

8333

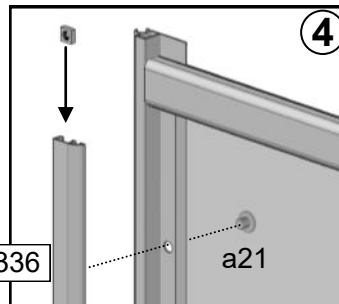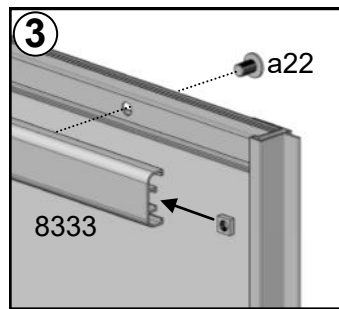

8336


4

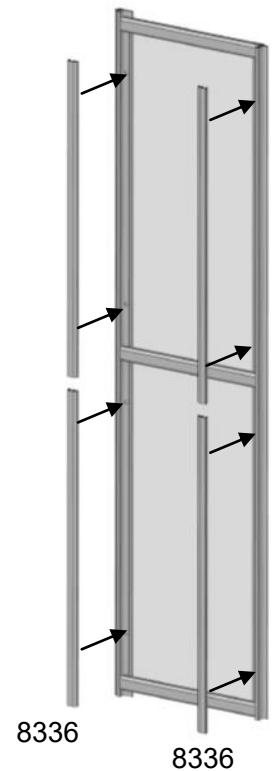

8336

8336

Double-sided adhesive tape paste aluminum profiles around, and then install PC board


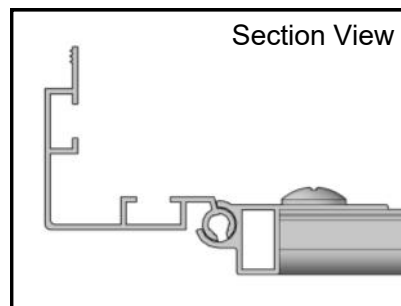


Section View


Loosen the bolts, remove the profile #8315



8315

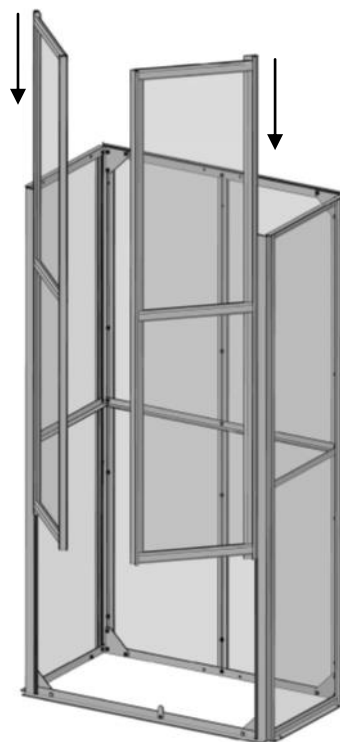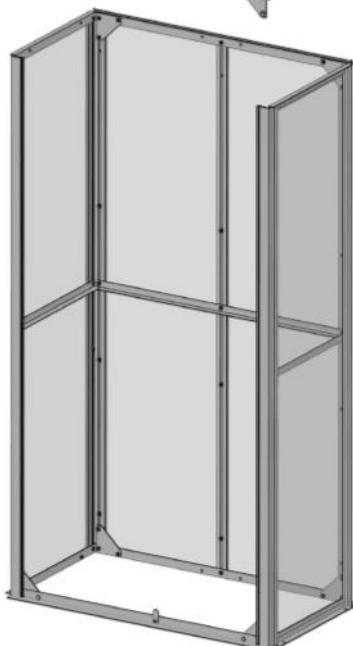







Assemble the profile #8315

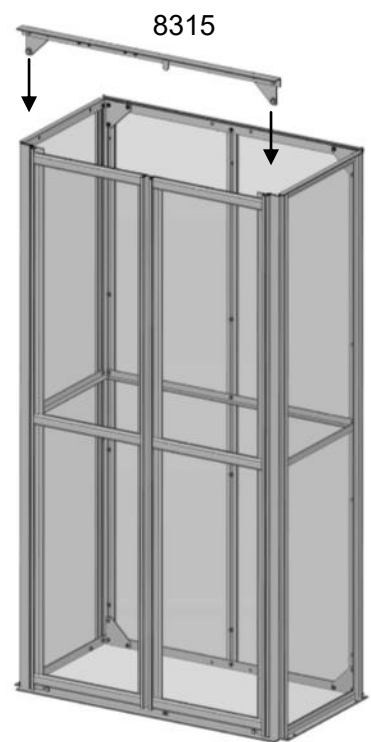



8315

Vent








														
#	8337	8338	8339	8340	8341	8081	a21	a22	a23	a12	a7	a10	p12	Adhesive tape
Size	738	360	738	360	678	260	M6x6	M6x10	M6	Φ4.2X9.5	M4x8	M4	-	- - -
QTY	1	2	1	2	2	1	12	4	16	2	2	2	4	

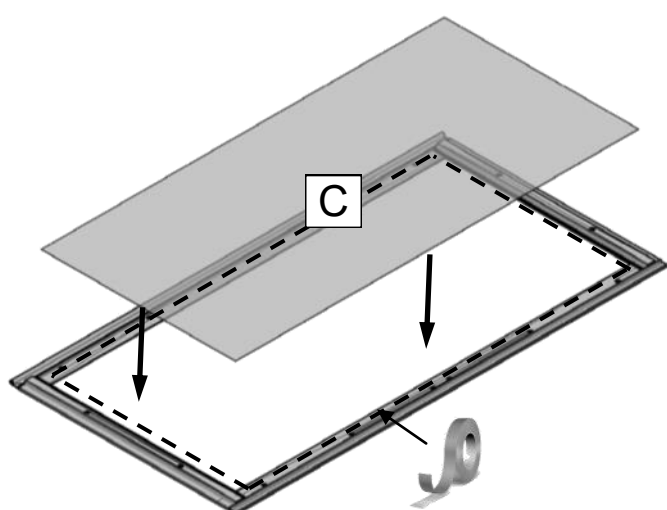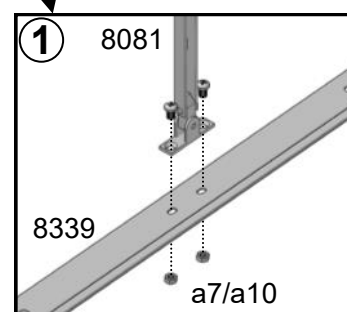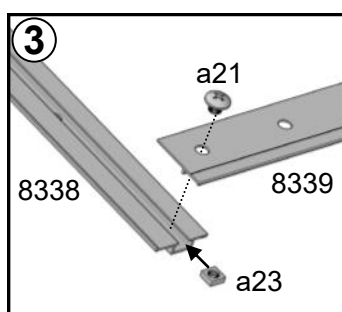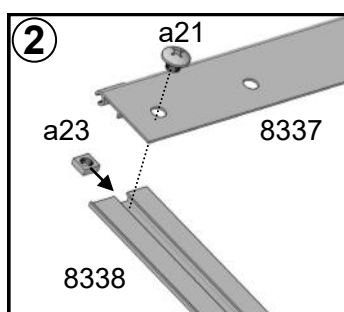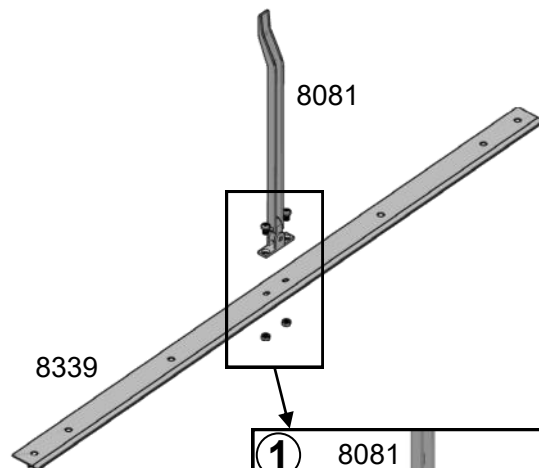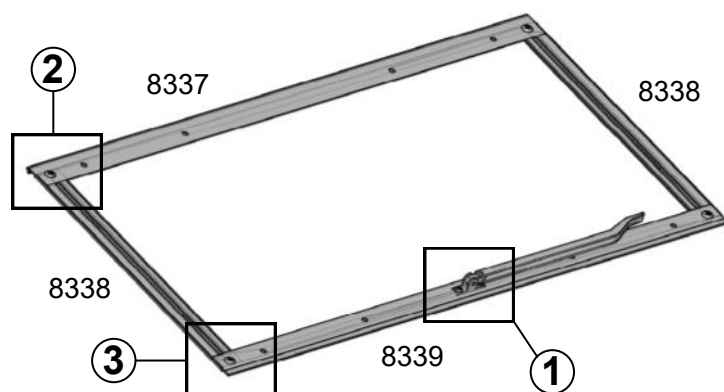

Double-sided adhesive tape paste aluminum profiles around, and then install PC board




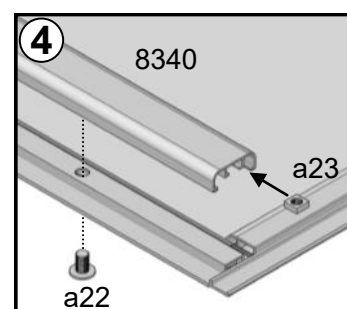
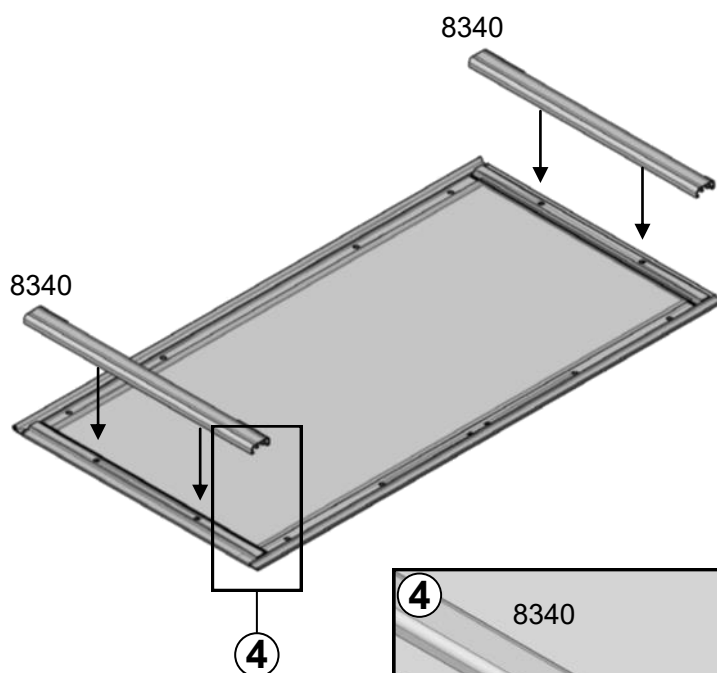


Vent

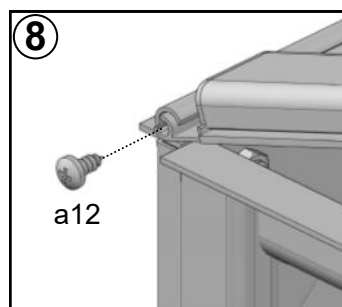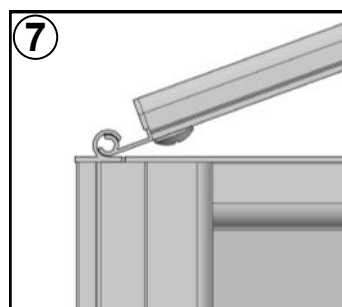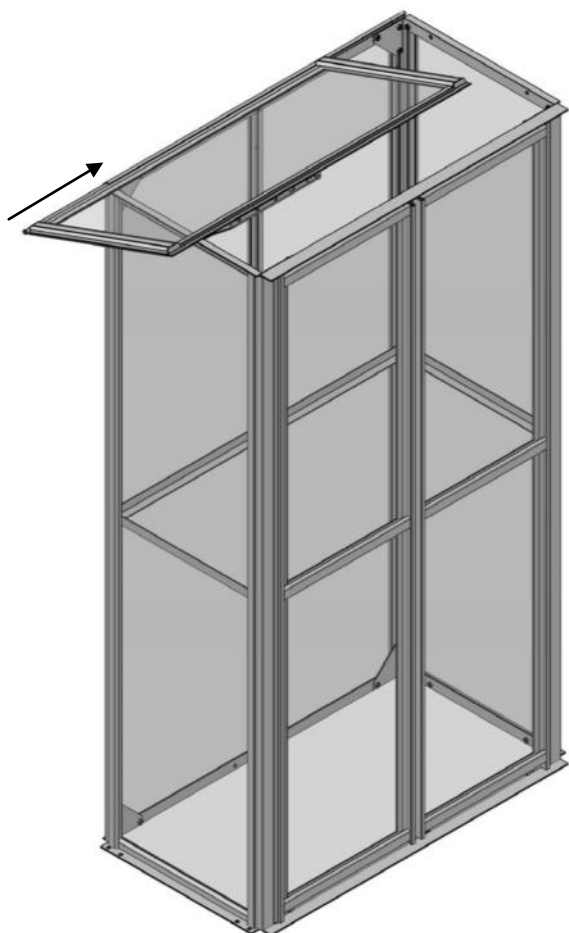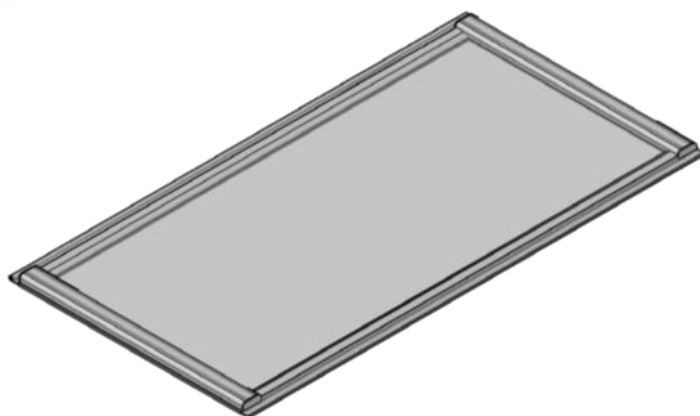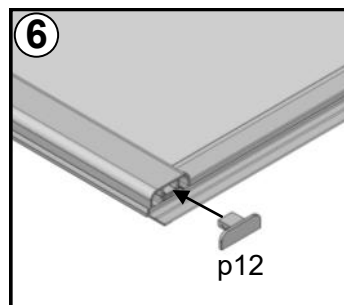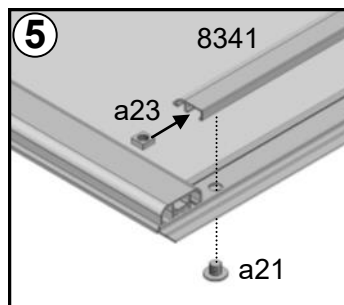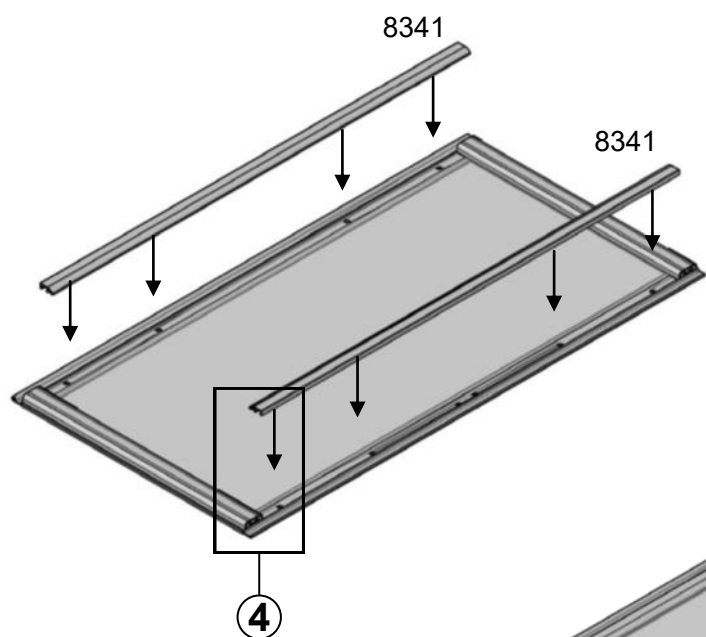


Option 1 Staging

					
#	8342	8343	a1	a2	a9
Size	362	720	M6x10	M6	M6x10
EB215	6	12	24	36	12

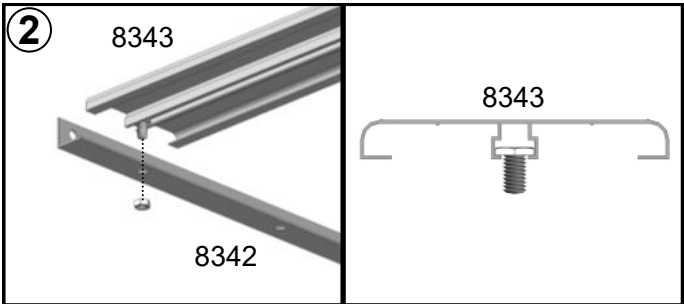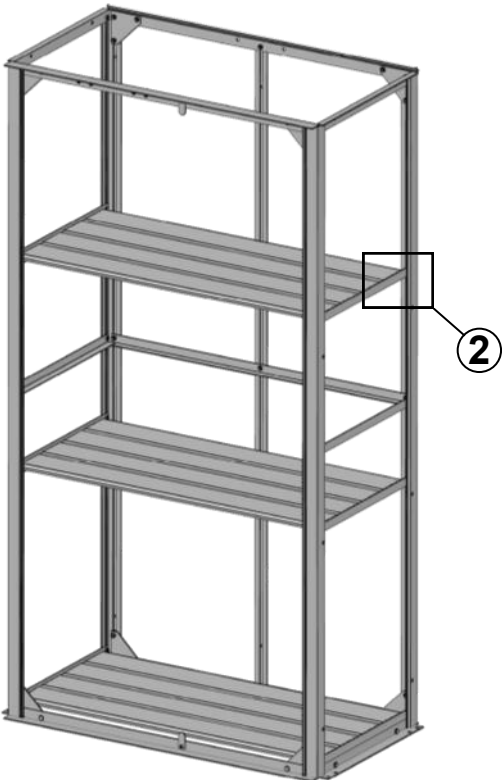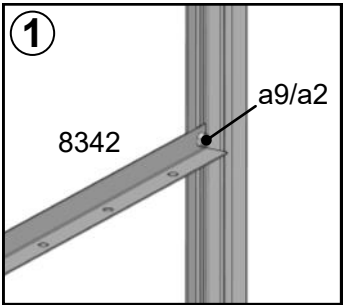
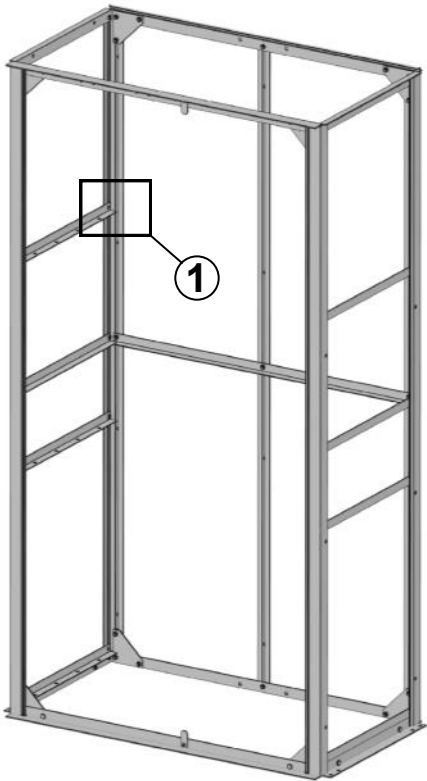
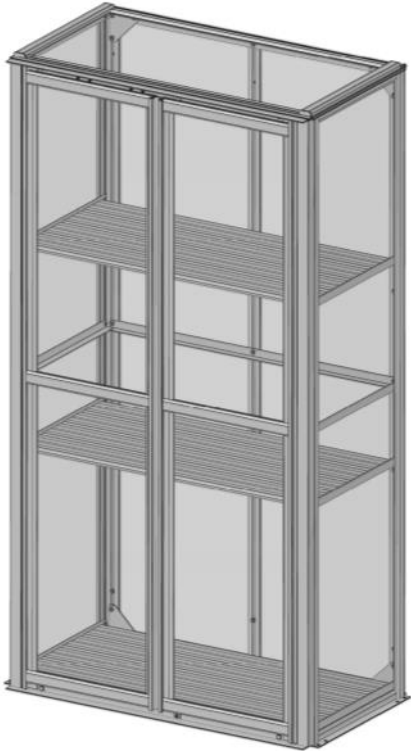


Option 2 Seed tray

				
#		8344	a2	a9
Size		710	M6	M6x10
EB215	12	8	20	20




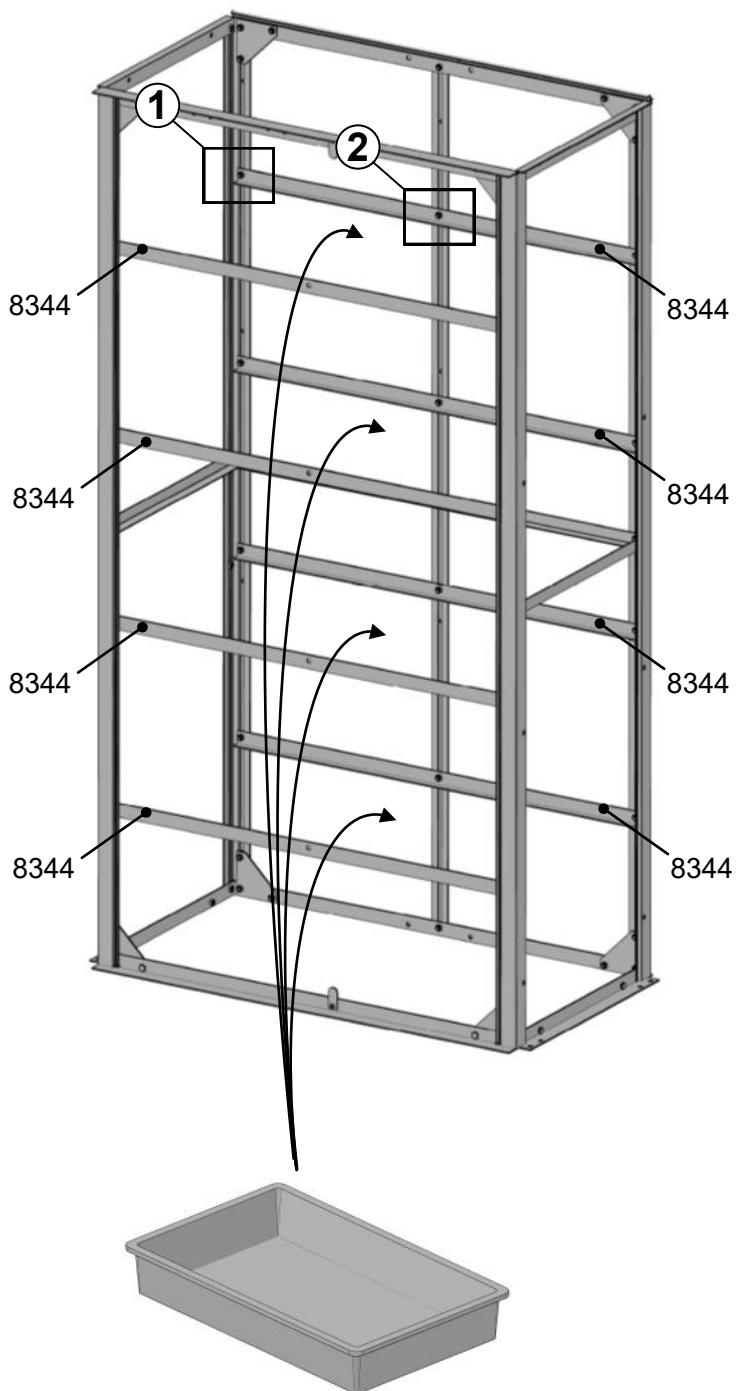


Seed trays are
put on each floor

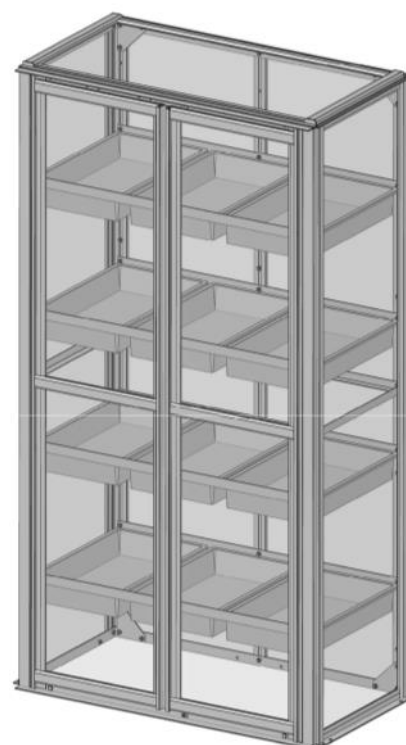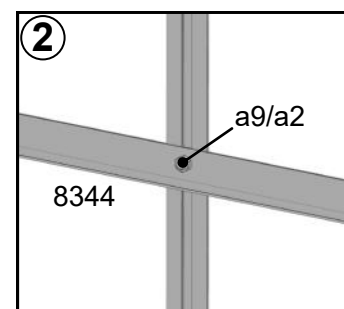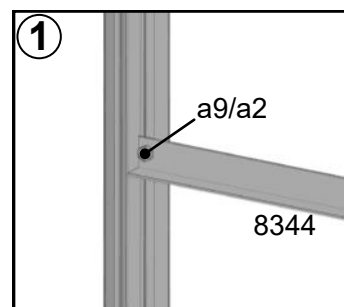

Option 3 Wheel

						
#	L	R		a1	a2	a31
Size	-	-	-	M6x10	M6	M6
QTY	2	2	4	16	16	16

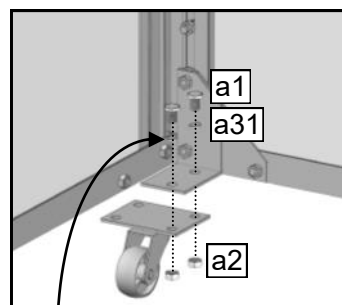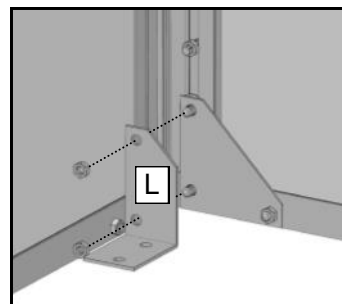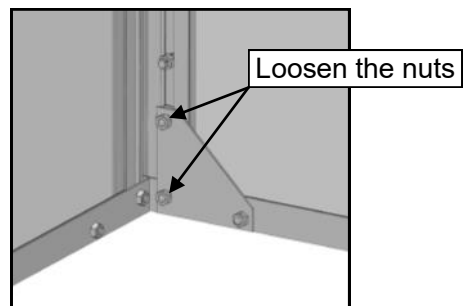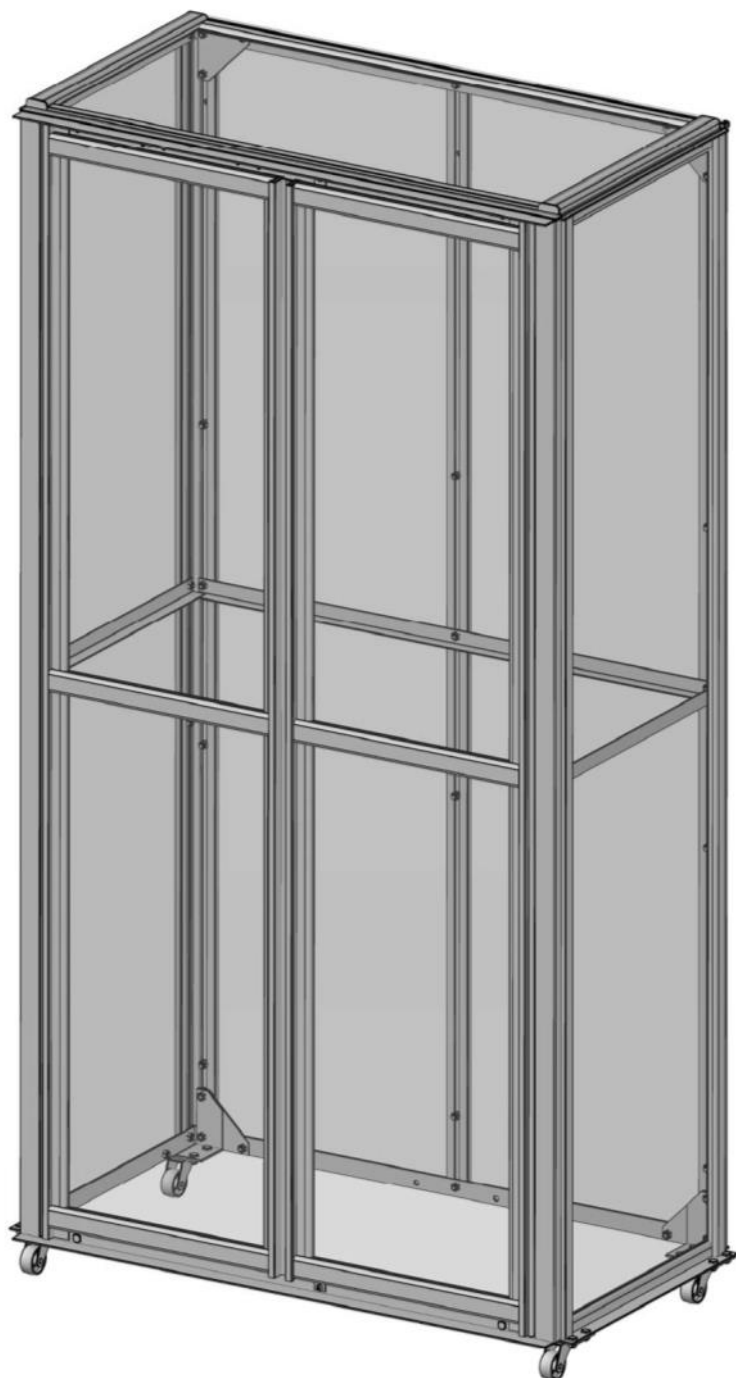

Note: It's important to install the spring washer in this position.

