



Samlevejledning

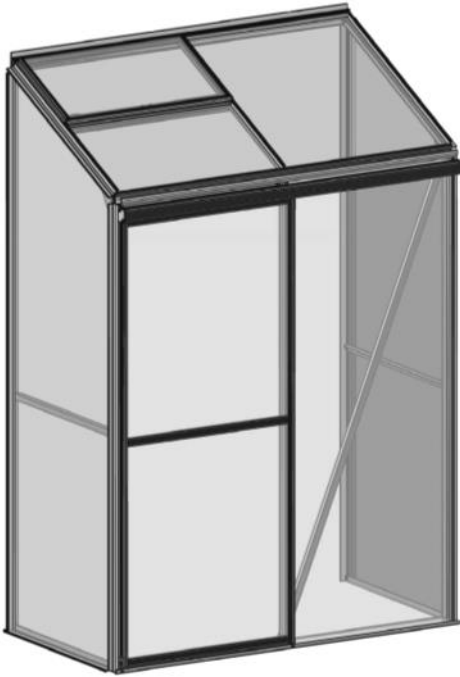

Model LSG204
Size: 128x68x185CM



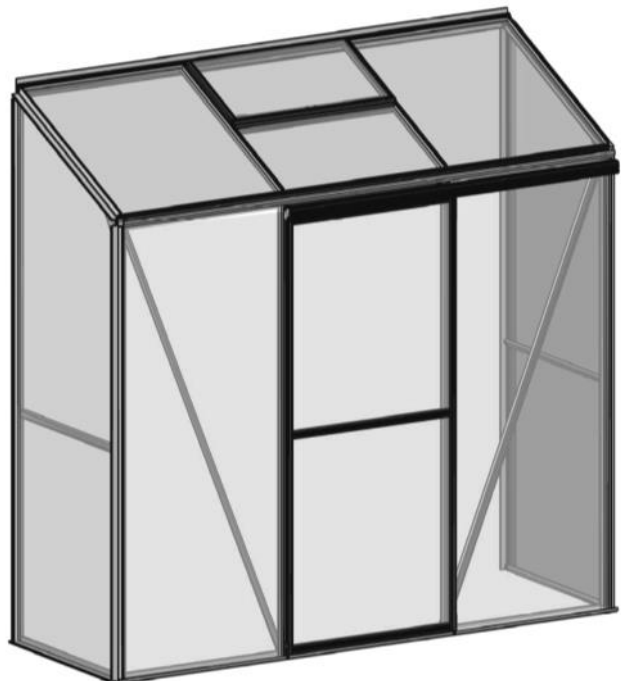


Model LSG206
Size: 188x68x185CM

Læs venligst samlevejledningen inden
du tager drivhuset i brug!


Base

Model	Gavl	Side profiler	Ankerben		Fastgørelsesflig	Bolte/Møtrikker	Forbinder
			“L”	“U”			
LSG204	2x650	1x1276	2	-	5	8	-
LSG206	2x650	1x1886	2	-	6	8	-

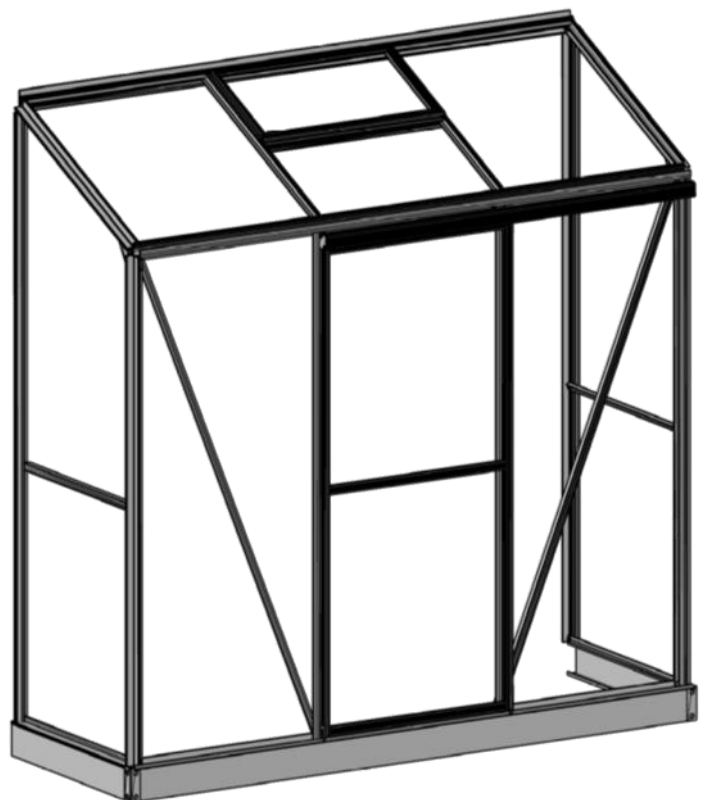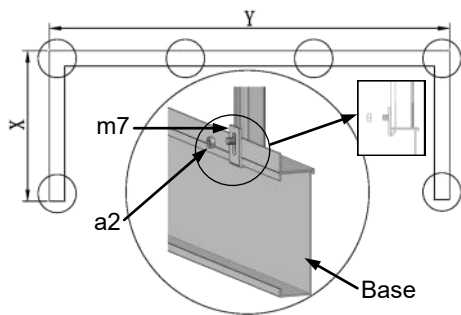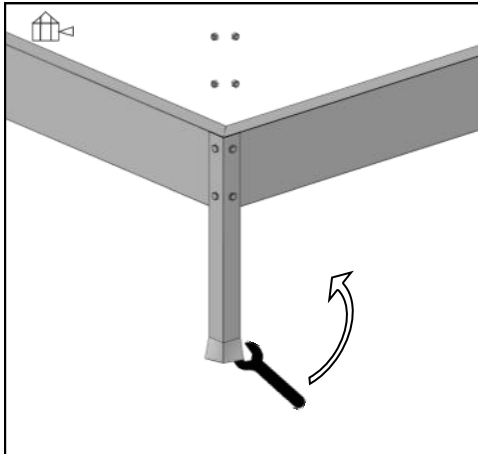







Gavl

#	6101	6102	6103	6104	6105	6106	6007	6160	a1	a2	
mm	1500	612	1798	1798	672	672	606	-	M6x10	M6	-
QTY	2	2	1	1	1	1	2	2	18	18	2

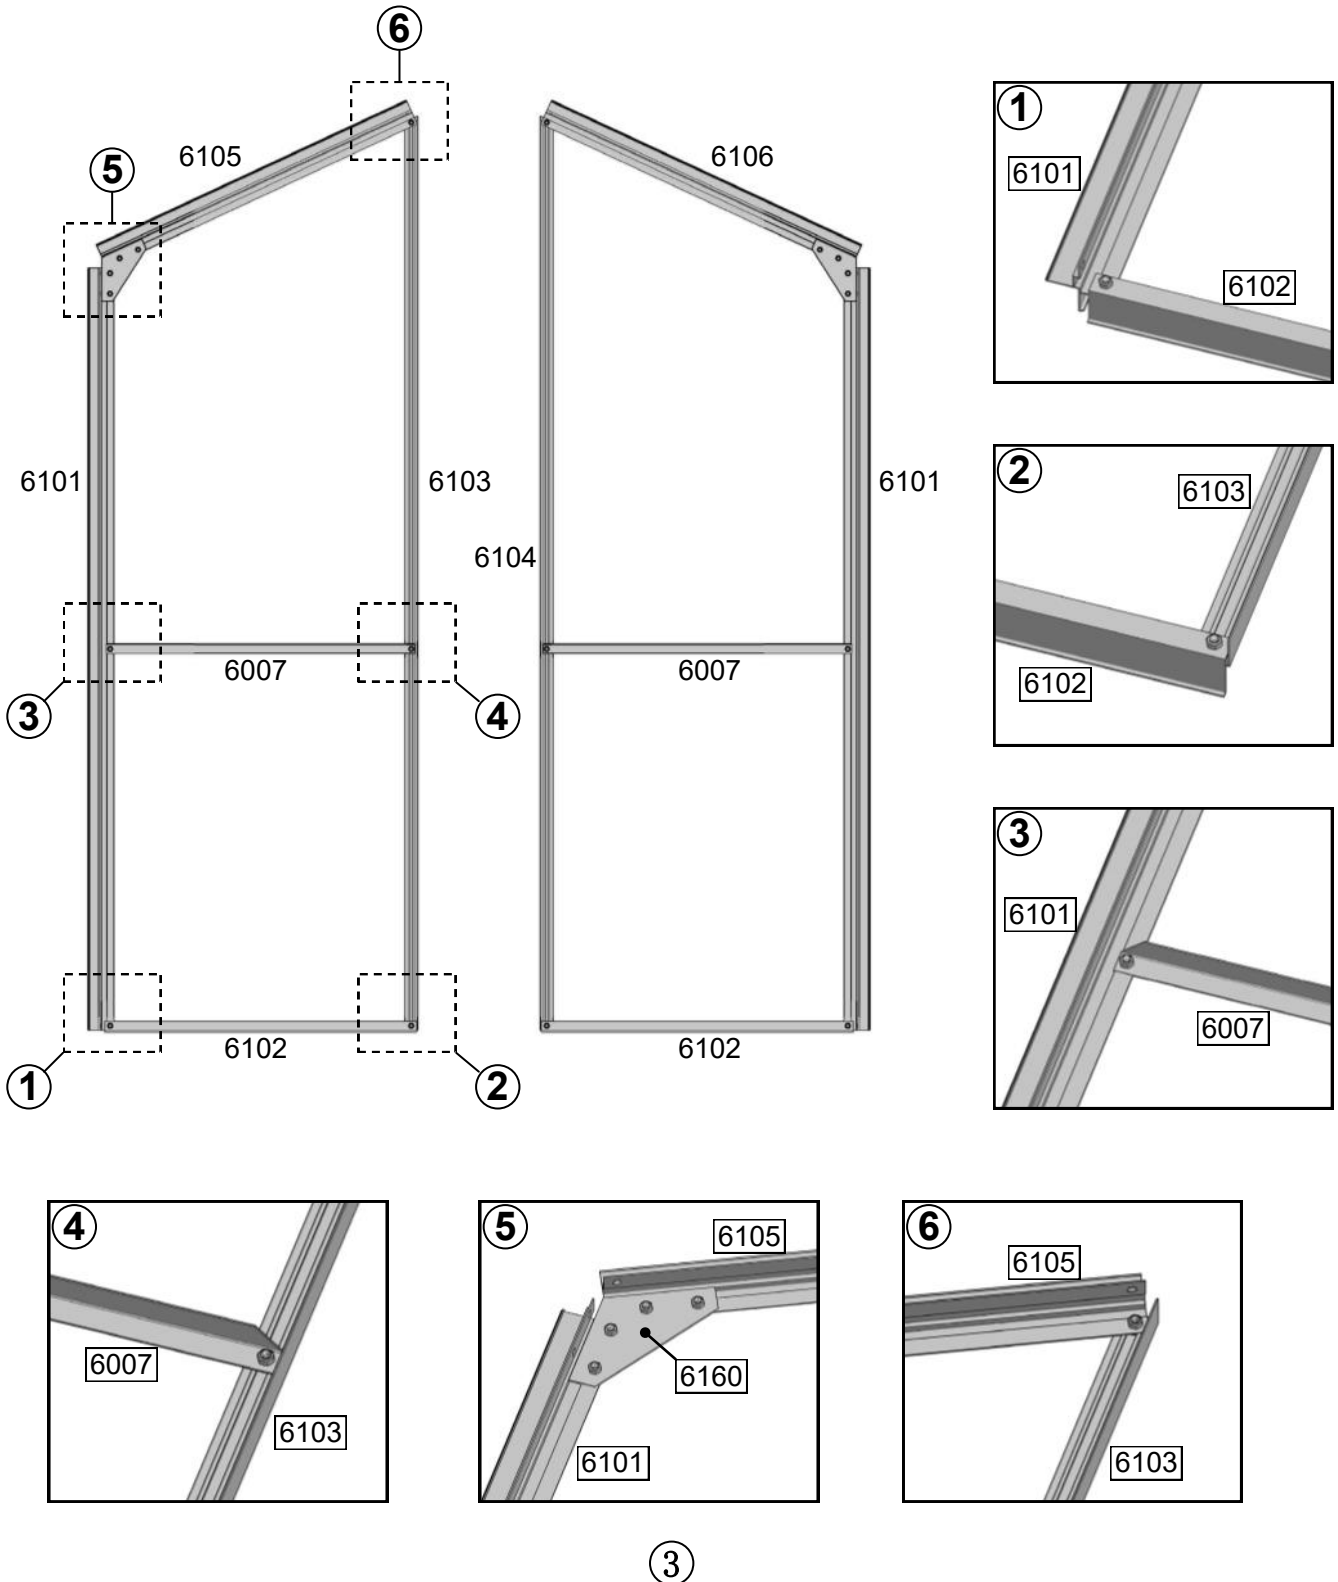





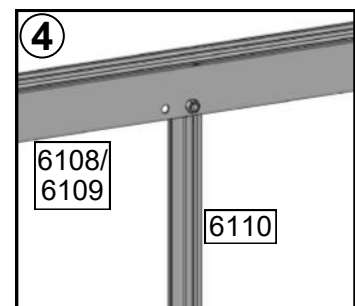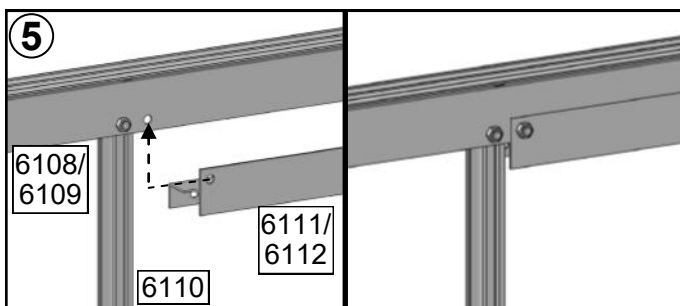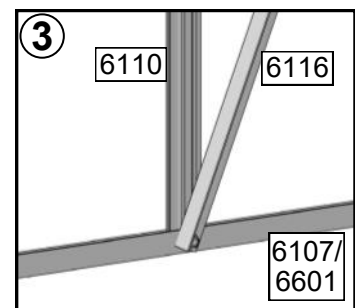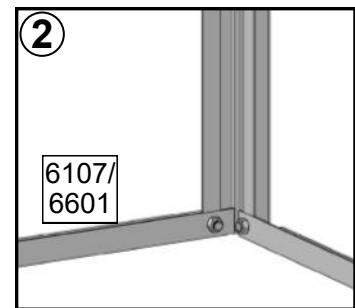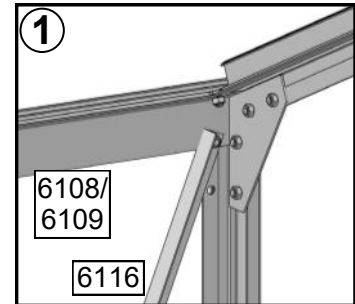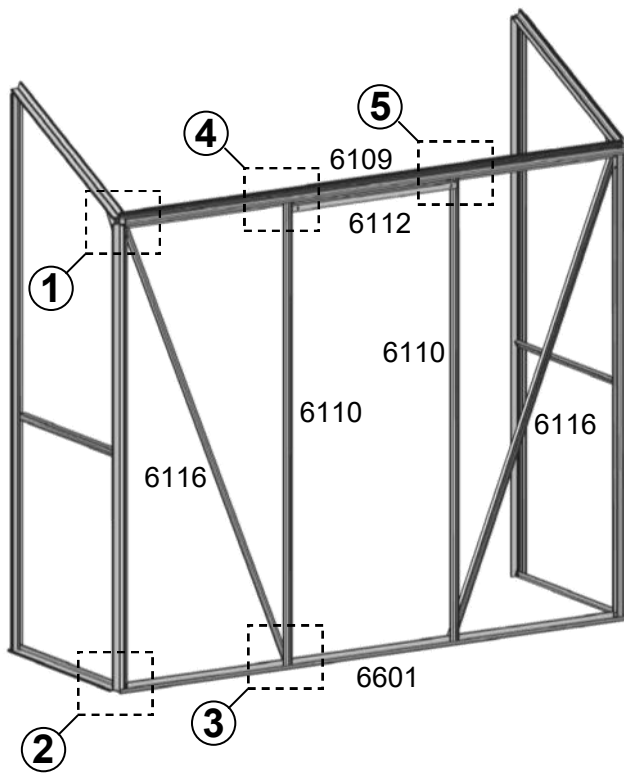







Front

#	6110	6107	6601	6108	6109	6111	6112	6116	a1	a2
mm	1500	1256	1866	1226	1836	587	600	1609	M6x10	M6
LSG204	1	1		1		1		1	10	10
LSG206	2		1		1		1	2	12	12











Tag

							
#	6113	6114	6115	a1	a2	a13	p9
mm	1226	1836	672	M6x10	M6	Φ4x25	Φ6
LSG204	1		1	4	4	4	4
LSG206		1	2	6	6	4	4

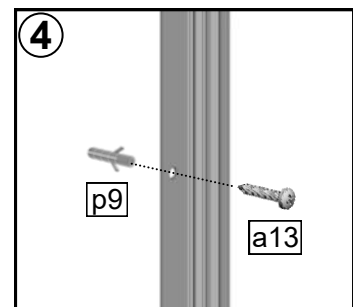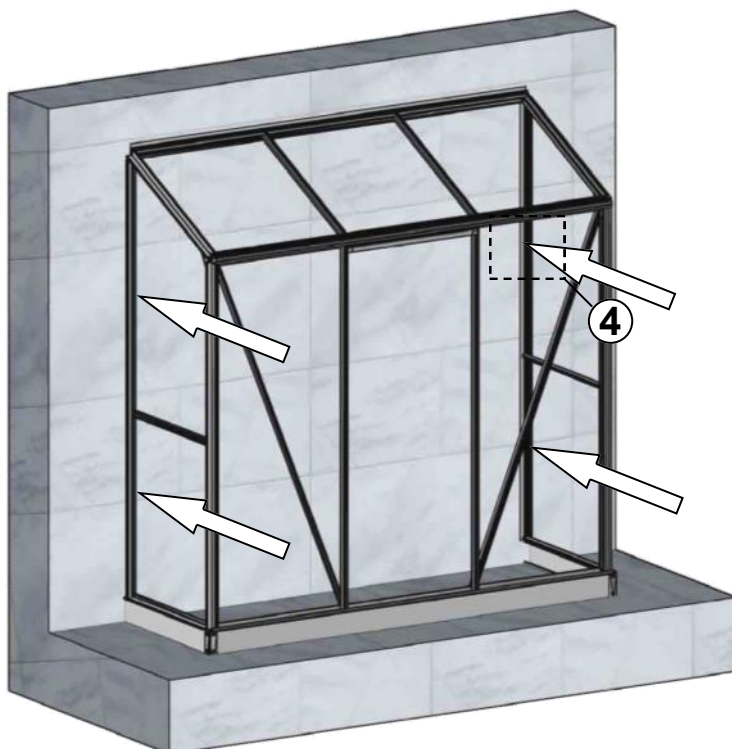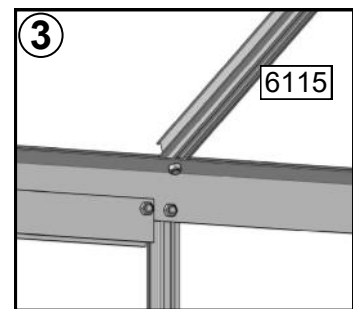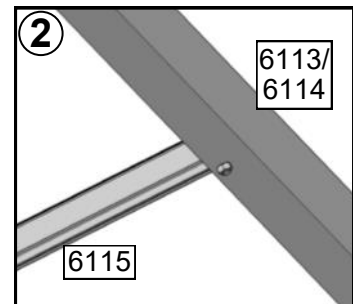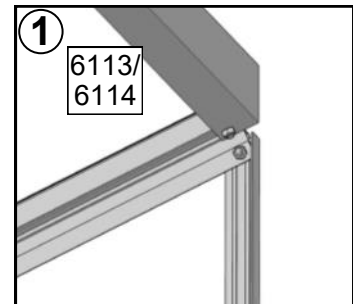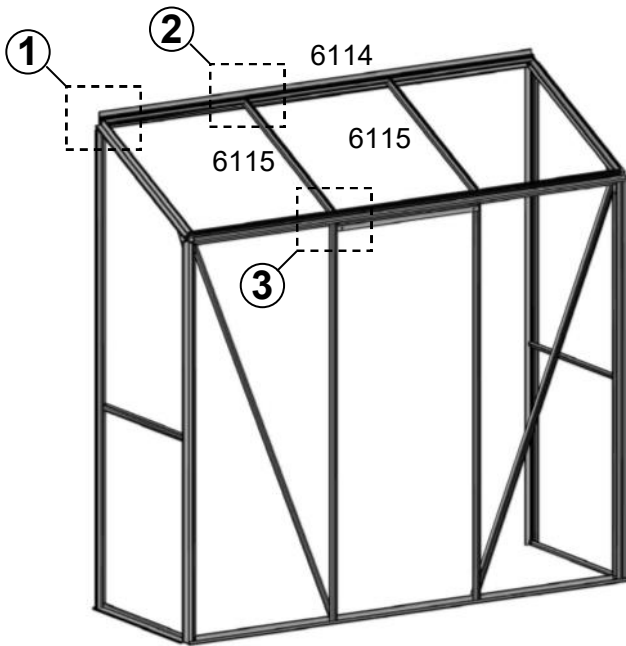


Udluftning/Vindue

#	6040	6041	6037	6117	6039	6055	a1	a2	a9	a7	a10	a4	p3
mm	612	626	611	313	600	200	M6x10	M6	M6x10	M4x8	M4	Φ3.9x8	-
LSG204	1		1	2	1	1	4	6	2	2	2	2	2
LSG206		1	1	2	1	1	4	6	2	2	2	2	2

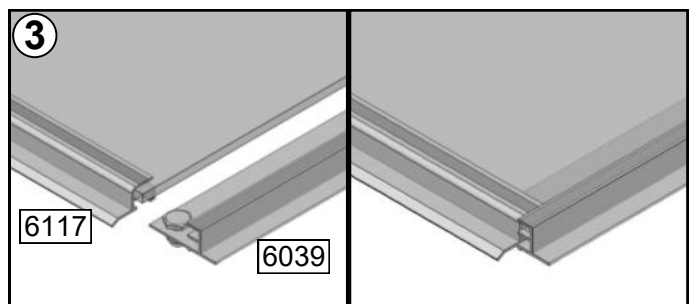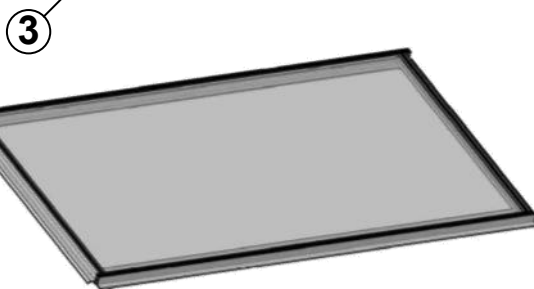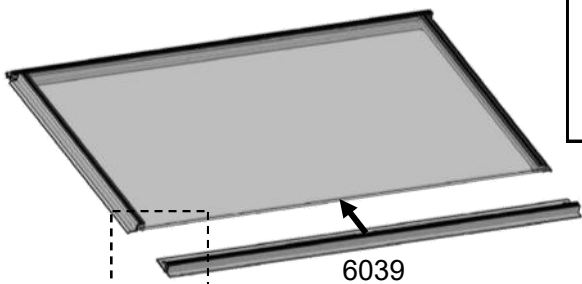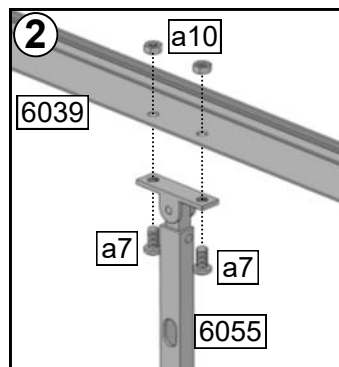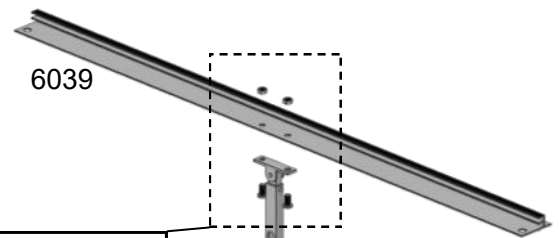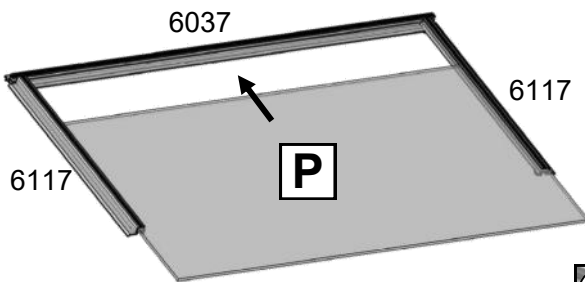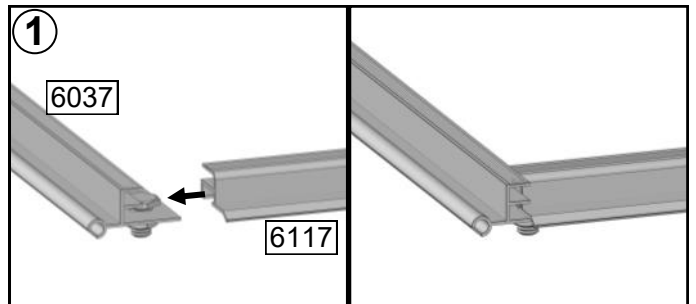
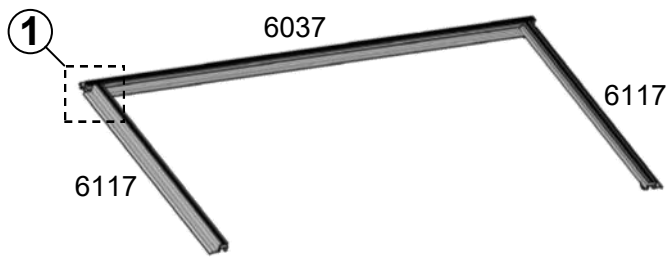


⑥






Udluftning/Vindue

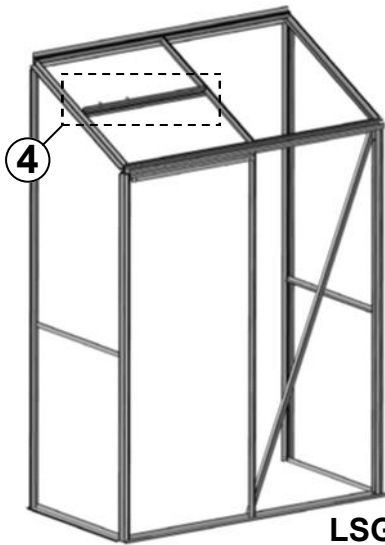

LSG204 Udluftning i venstre side










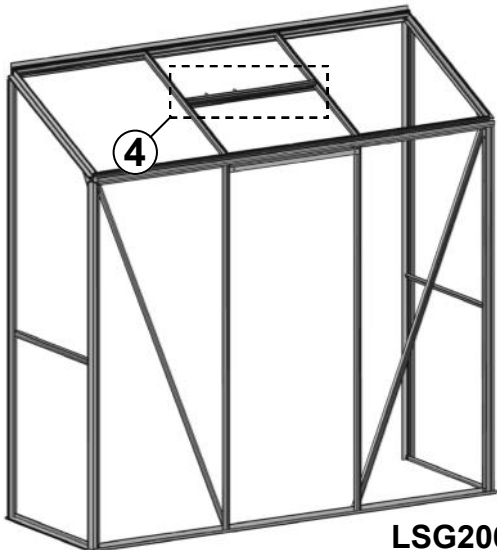
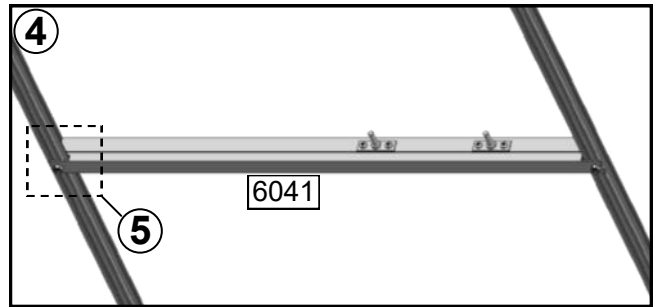


LSG206

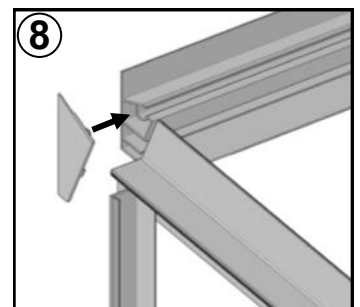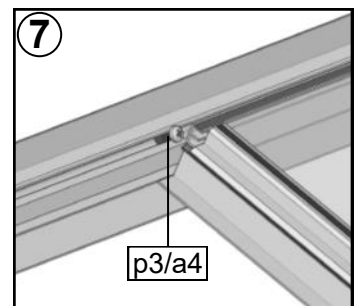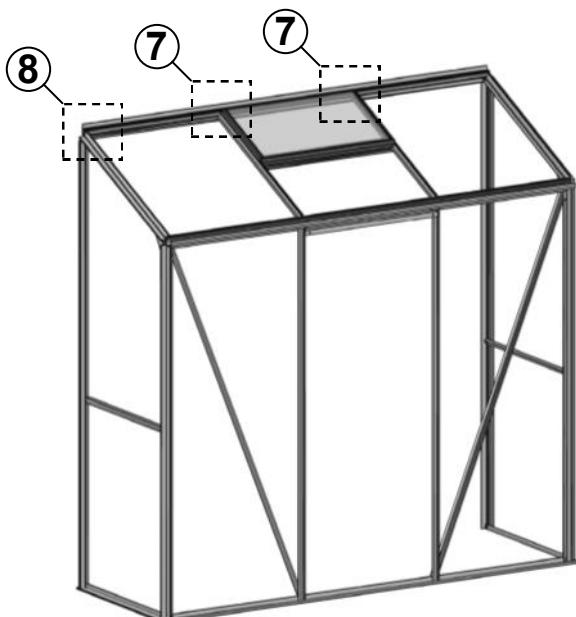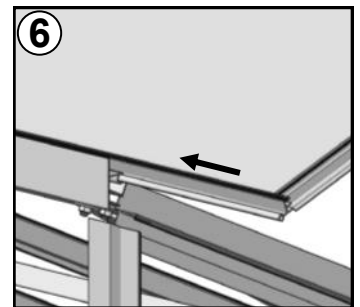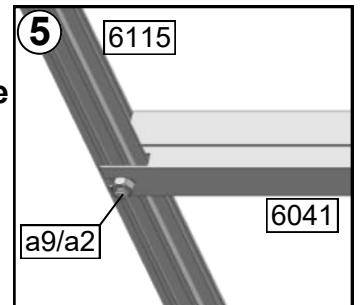

Dør





#	6643	6644	6645	6118	p4	p5	m22	a1	a2	a5	a6	a7	n1	FLUFF
mm	1225	602	602	1439	-	-	-	M6x10	M6	Φ3.5x19	Φ3.5x25	M4x8	-	1439
QTY	1	1	2	2	2	2	1	4	4	4	6	2	2	2

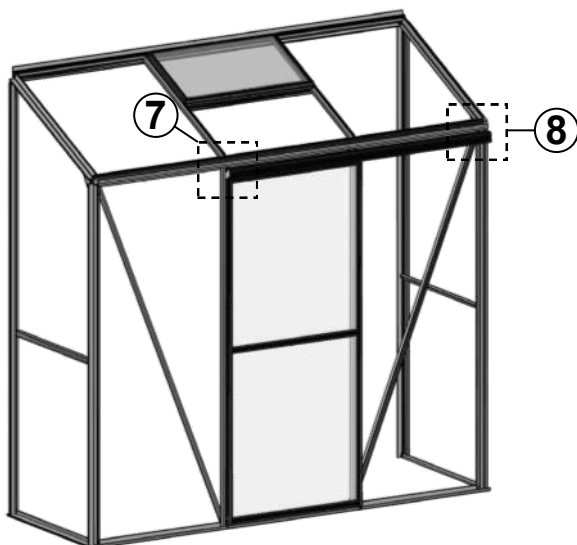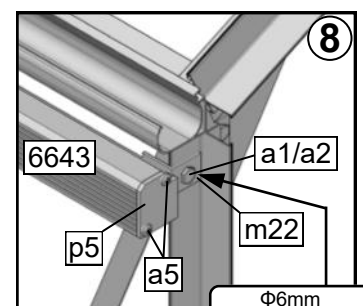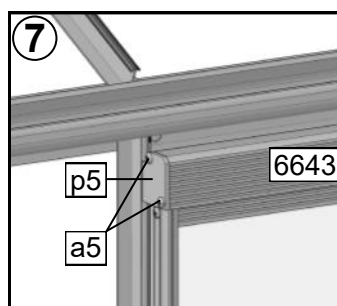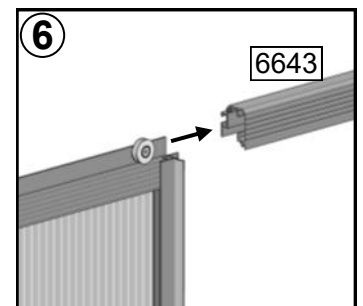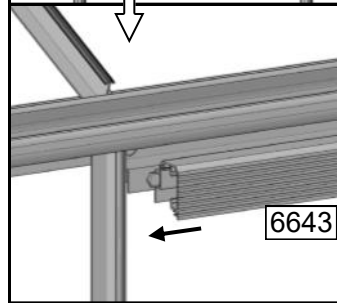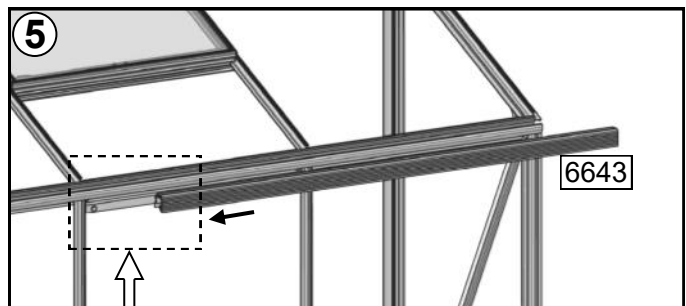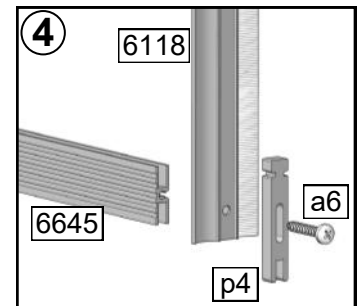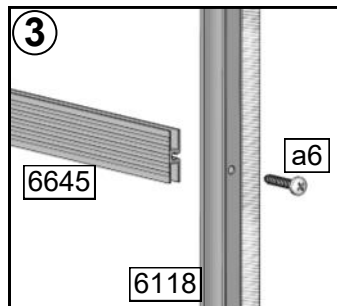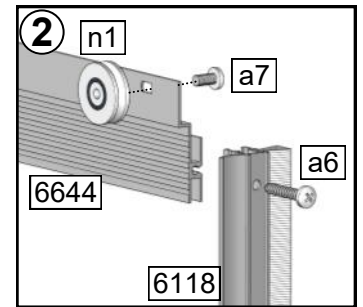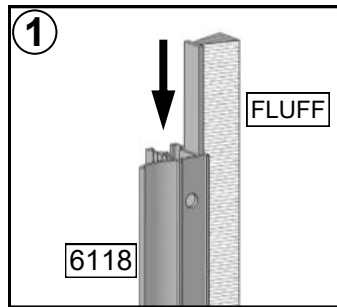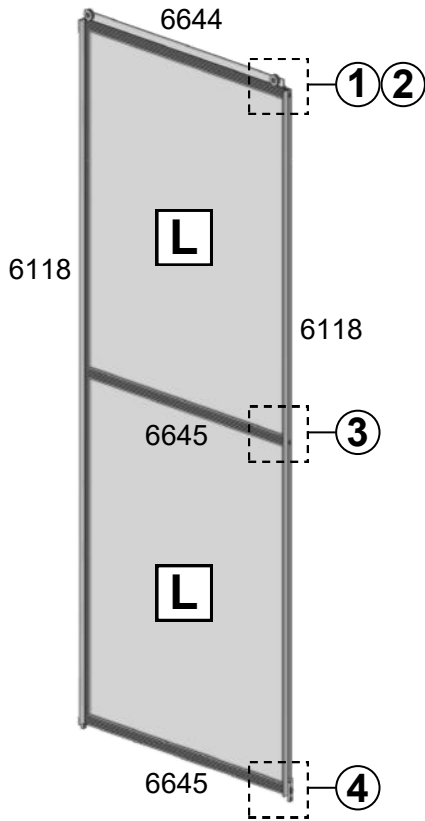

8

POLYCARBONAT FASTGØRELSESMETODE 1

— Brug fjederklips og anti-støv tape og skum til at fastgøre paneler

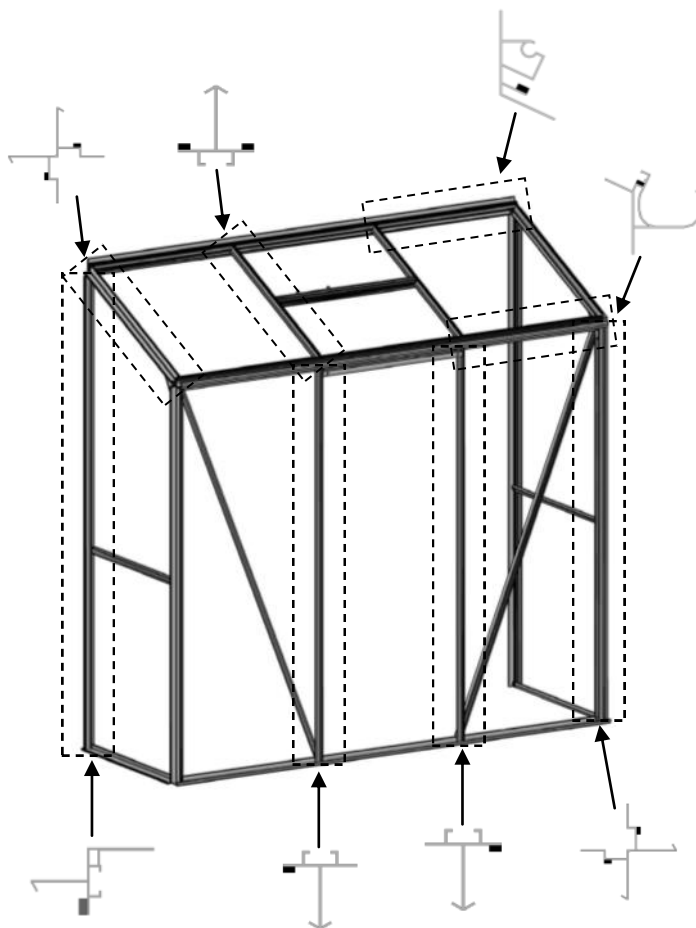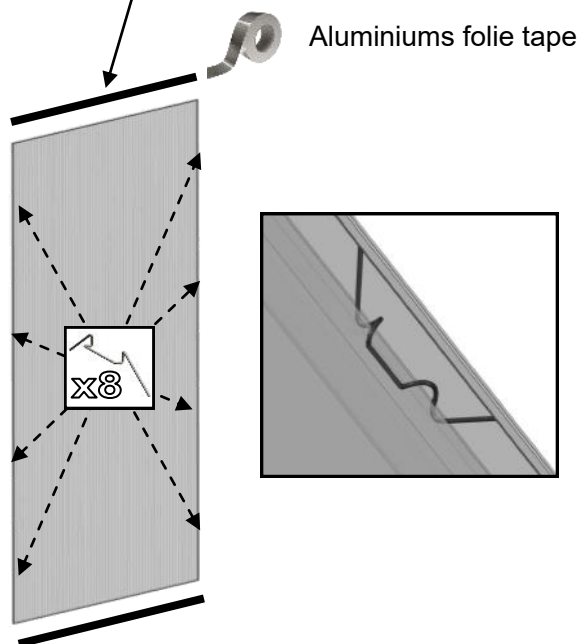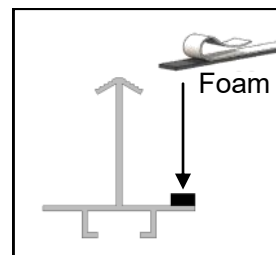
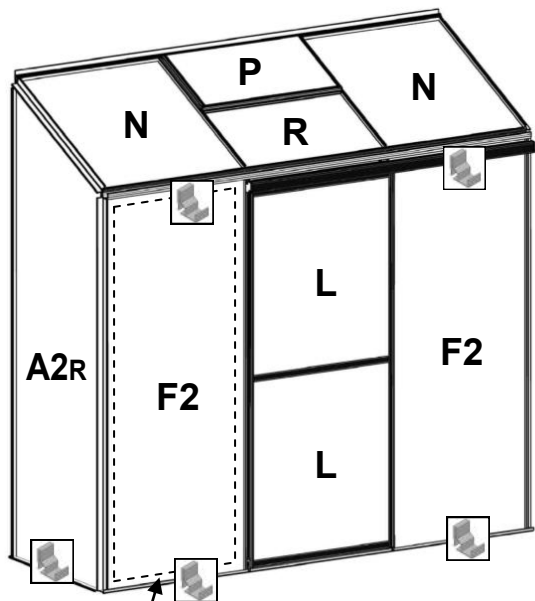


#	Size	LSG204	LSG206
A2L	605x1519/1801	1	1
A2R	605x1519/1801	1	1
F2	605x1496	1	2
L	615x701	2	2
N	605x683	1	2
R	605x348	1	1
P	594x324	1	1
	12mm	4	6

		LSG204	LSG206
		38	50
SKUM	10M	2 ruller	2 ruller
TAPE	15M	1 ruller	1 ruller

POLYCARBONAT FASTGØRELSESMETODE 2

— Brug PVC kappe og anti-støv tape til at fastgøre paneler

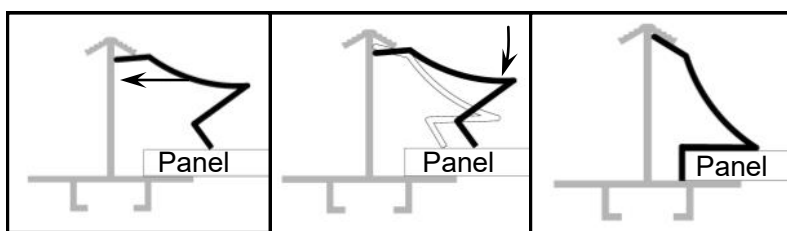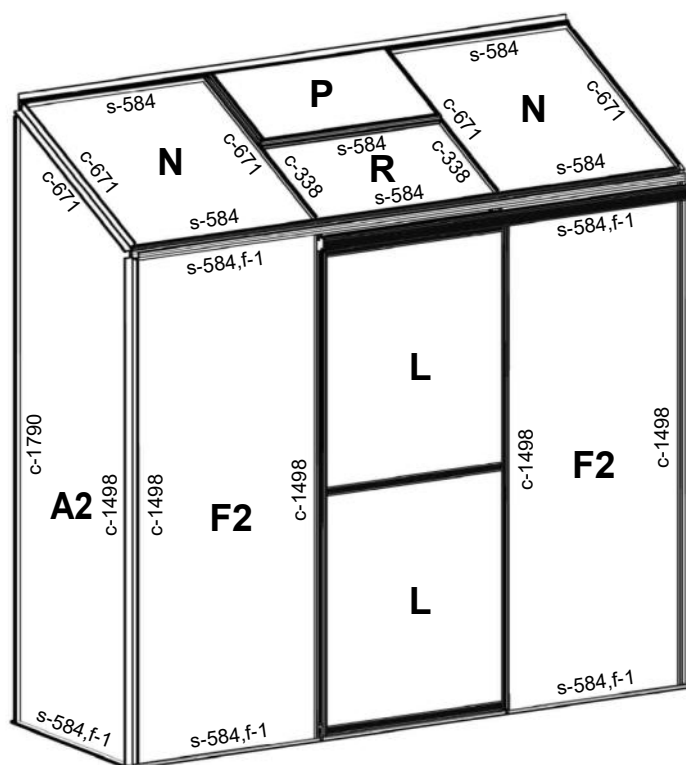

#	Størrelse	LSG204	LSG206
A2L	600x1516/1796	1	1
A2R	600x1516/1796	1	1
F2	600x1493	1	2
L	615x701	2	2
N	600x680	1	2
R	600x345	1	1
P	594x324	1	1

	DWG	Længde	LSG204	LSG206
c		338	2	2
		671	4	6
		1498	4	6
		1790	2	2
s		584	8	12
f		12	4	6