

Swagger[®]

S-RW1
BACKBOARD
AND RIM



PREPARATION

PLEASE READ THIS PAGE CAREFULLY

Remove all parts and hardware from the carton and place them on a clean soft surface. Check carefully to make sure nothing is missing. Dispose of all packaging materials properly. Please recycle.



SAFETY INSTRUCTIONS



FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside all packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use, and supervision are essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

- If using a ladder during assembly, use extreme caution.
- Check base regularly for leakage. Slow leaks could cause the system to tip over unexpectedly
- Seat the pole sections properly (if applicable). Failure to do so could allow the pole sections to separate during play and/or during transport of the system.
- Climate, corrosion or misuse could result in system failure.
- If technical assistance is required, contact Customer Service.
- Minimum operational height is 6' 6" (1.98m) to the bottom of backboard.

Most injuries are caused by misuse and/or not following instructions.

Use caution when using this unit.




WARNING




- For residential use only! NOT for commercial use! DO NOT use this product for other than its intended purpose. Any commercial, public, or institutional use voids all warranties.

Pack contents


A 1x Backboard

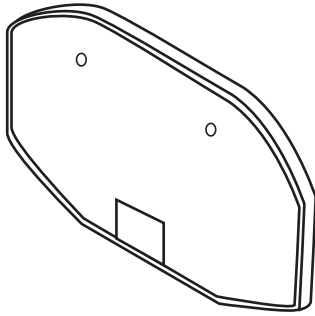


B 1x Net

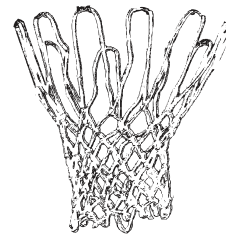

C 1x Rim

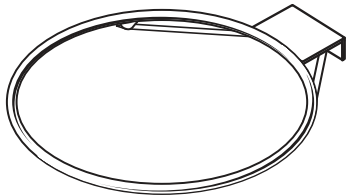

D 1x Bracket

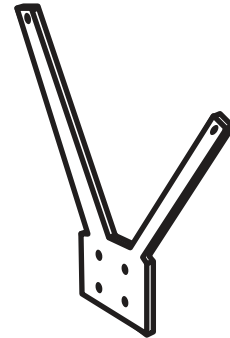


E 2x Bolts



M6 x60mm

F 4x Bolts



M10 x80mm

G 2x Spring Washers



M6

H 4x Spring Washers



M10

I 2x Washers




M6

J 4x Washers




M10

K 2x Wall plugs



M10X45mm

L 4x Wall plugs



M14X70mm

Do... (if applicable)

Keep your face and mouth away from the rim and net during play. If your teeth or face come into contact with the rim and net, serious injury can occur.

When adjusting the height or moving the system, keep your fingers and hands away from the moving parts.

Ensure the surface beneath the base is flat and free of stones, gravel, or any other debris which may puncture the base. If leakage occurs the system may topple over.

Check system before each use for loose fittings, wear and tear or any other signs of instability. Tighten any loose fittings.

Keep water and organic material away from the pole. The pole could rust and fall.

Once a month check the pole and all metal parts for rust.

Do Not... (if applicable)

Do not hang from the rim.

Do not wear jewellery during play, it may become entangled with the net.

Do not slide or climb onto the base or pole.

Do not leave the system standing upright without having filled the base with water or sand.

Do not allow children to adjust the height or move the system.

Do not use the system in windy or severe weather conditions. System may tip over. Place system in an area protected from the wind or in an area away from property that may be damaged if the system falls.

Do not use near overhead power lines.

Do not hang anything off the rim or backboard and do not use the system to lift or hoist anything.

Step 1: Placing backboard and rim onto the wall

- 1) Locate the desired position for the backboard on the wall. Locate an area away from windows and obstructions. The wall surface should be flat and ideally be brick or of a smooth sound rendering. Undulating, uneven or porous surfaces are not suitable for this installation. If in doubt consult a qualified builder for advice. Normal playing height is 3.05 metres (10ft) from the top edge of the rim to the playing surface. For younger players a lower playing height is recommended.
- 2) Place the backboard (A) against the wall in the desired position. Check for squareness with a spirit level. Mark the six hole positions through the backboard with a marker pen.
- 3) Drill the six holes with a depth of 65mm . To accomodate the wall plugs (K) and (L).
- 4) Insert the bolts (E) and wall plugs (K) into the wall with washers (I) and spring washers (C). The bolts (E) bolts should protrude 10mm.
- 5) Slide the bracket (D), backboard (A) and rim (C) onto the four bolts (F) and secure into position with the washers (J) (H).
- 6) Tighten all bolts securely.
- 7) Attach the net (B) to the net hooks on the rim (C).

